GPS35190HR

PCIe Trimble GPS Carrier Module

User's Manual

BDM-610020115 Rev. B

RTD Embedded Technologies, Inc.
AS9100 and ISO 9001 Certified

RTD Embedded Technologies, Inc.
103 Innovation Boulevard
State College, PA 16803 USA
Telephone: 814-234-8087
Fax: 814-234-5218

www.rtd.com

sales@rtd.com
techsupport@rtd.com

Revision History

Rev A	Initial Release
Rev B	Added MTBF, typical wattage and typical current to Specification section Added IDAN-GPS35190HRS and IDAN-GPS35190HRD connector information to the IDAN section Added GPS Configuration Section

Advanced Analog I/O, Advanced Digital I/O, aAIO, aDIO, a2DIO, Autonomous SmartCal, "Catch the Express", cpuModule, dspFramework, dspModule, expressMate, ExpressPlatform, HiDANplus, "MIL Value for COTS prices", multiPort, PlatformBus, and PC/104EZ are trademarks, and "Accessing the Analog World", dataModule, IDAN, HiDAN, RTD, and the RTD logo are registered trademarks of RTD Embedded Technologies, Inc (formerly Real Time Devices, Inc.). PS/2 is a trademark of International Business Machines Inc. PCI, PCI Express, and PCIe are trademarks of PCI-SIG. PC/104, PC/104-Plus, PCI-104, PCIe/104, PCI/104-Express and 104 are trademarks of the PC/104 Embedded Consortium. All other trademarks appearing in this document are the property of their respective owners.

Failure to follow the instructions found in this manual may result in damage to the product described in this manual, or other components of the system. The procedure set forth in this manual shall only be performed by persons qualified to service electronic equipment. Contents and specifications within this manual are given without warranty, and are subject to change without notice. RTD Embedded Technologies, Inc. shall not be liable for errors or omissions in this manual, or for any loss, damage, or injury in connection with the use of this manual.

Copyright © 2021 by RTD Embedded Technologies, Inc. All rights reserved.

Table of Contents

1 Introduction 7

1.1 Product Overview 7

1.2 Board Features 7

1.3 Ordering Information 7

1.4 Contact Information 7
- 1.4.1 Sales Support 7
- 1.4.2 Technical Support 7

2 Specifications 8

2.1 Operating Conditions 8

2.2 Electrical Characteristics 8

3 Board Connection 9

3.1 Board Handling Precautions 9

3.2 Physical Characteristics 9

3.3 Connectors and Jumpers 10
- 3.3.1 Bus Connectors 10
  - CN1(Top) & CN2(Bottom): PCIe Connector 10
- 3.3.2 External I/O Connectors 10
  - CN7: Serial I/O Connector 10
  - CN6: GPS Utility Connector 11
  - CN3: GPS USB Connector 11
  - CN4: GPS 10/100 Mbps Ethernet Connector 11
  - CN5: GPS CAN Bus Connector 12
- 3.3.3 Jumpers 12
  - JP1 and JP2: CN7 Serial Port Source 12
  - JP3: CN7 Serial Port Mode 12
  - JP4: GPS Serial Port 3 Connection 12
  - JP5: CAN Bus Termination 13
  - JP7: GPS Software Reset 13
  - JP10: GPS Carrier Detect 13
- 3.3.4 LEDs 13
  - Power LED 13
  - Real-Time Kenematic LED 13
  - Satellite LED 13

3.4 Steps for Installing 14

4 IDAN-GPS35190HRS Connections 15

4.1 Module Handling Precautions 15

4.2 Physical Characteristics 15

4.3 Connectors 15
- 4.3.1 Bus Connectors 15
  - CN1(Top) & CN2(Bottom): PCIe Connector 15
- 4.3.2 External I/O Connectors 16
  - Utility Connector - 9-pin “D” Female Connector 16
  - GPS Antenna - SMA Female Connector 16

4.4 Steps for Installing 17

5 IDAN-GPS35190HRD Connections 18

5.1 Module Handling Precautions 18

5.2 Physical Characteristics 18

5.3 Connectors 18
- 5.3.1 Bus Connectors 18

CN1(Top) & CN2(Bottom): PCIe Connector 18
5.3.2 External I/O Connectors 18
Utility Connector - 9-pin “D” Female Connector 18
Ethernet Connector - 9-pin “D” Male Connector 19
CAN Connector - 9-pin “D” Male Connector 19
Serial Connector - 9-pin “D” Male Connector 19
USB Connector - 9-pin “D” Male Connector 20
GPS Antenna - SMA Female Connector 20
5.4 Steps for Installing 20
6 Functional Description 22
6.1 Block Diagram 22
6.2 GPS Interface 22
6.2.1 PCIe Octal UART 22
6.2.2 DTR GPS Reset 22
7 Software 23
7.1 Installing the Software 23
7.2 Serial Port Configuration 23
7.3 Software Programming 23
7.3.1 API Interface 23
7.3.2 COM Port Numbering 23
7.3.3 Base Address and Register Mapping 23
8 GPS Configuration 24
9 Troubleshooting 25
10 Additional Information 26
10.1 PC/104 Specifications 26
10.2 PCI and PCI Express Specification 26
11 Limited Warranty 27

Table of Figures

Figure 1: Board Dimensions 9
Figure 2: Board Connections 10
Figure 3: Example 104™ Stack 14
Figure 4: IDAN Dimensions 15
Figure 5: Example IDAN System 17
Figure 6: IDAN Dimensions 18
Figure 7: Example IDAN System 21
Figure 8: GPS35190 Block Diagram 22

Table of Tables

Table 1: Ordering Options 7
Table 2: Operating Conditions 8
Table 3: Electrical Characteristics 8
Table 4: CN7 in UART RS-232 Mode 10
Table 5: CN7 in GPS RS-232 Mode 10
Table 6: CN7 in UART RS-422/485 Mode 11
Table 7: CN7 in GPS RS-422/485 Mode 11
Table 8: CN6 GPS Utility 11
Table 9: CN3 GPS USB 11
Table 10: CN4 GPS Ethernet 11
Table 11: CN5 GPS CAN 12
Table 12: JP1 and JP2 Settings 12
Table 13: JP3 Settings 12
Table 14: JP4 Settings 12
Table 15: JP5 Settings 13
Table 16: JP7 Settings 13
Table 17: JP8 Settings 13
Table 18: IDAN-GPS35190 Utility Connector 16
Table 19: IDAN-GPS35190 Utility Connector 19
Table 20: IDAN-GPS35190 Ethernet Connector 19
Table 21: IDAN-GPS35190 CAN Connector 19
Table 22: IDAN-GPS35190 Serial Connector 19
Table 23: IDAN-GPS35190 USB Connector 20

1 Introduction

1.1 Product Overview

The GPS35190 is designed to provide a PCIe UART interface to a Trimble GPS. It uses a PCIe/104 interface to the CPU module, and provides the ability to communicate with all three GPS serial interfaces. Additionally, the module provides connectors for Ethernet, CAN, and USB to the module. It is compatible with all PCIe/104 modules.

1.2 Board Features

- PCIe Interface to CPU
- UART interface to Trimble GPS modules
- Ethernet connector to GPS module
- USB connector to GPS module
- CAN connector to GPS module
- External serial interface to GPS module, optionally a RS-232/422 serial port

1.3 Ordering Information

The GPS35190 is available with the following options:

Table 1: Ordering Options

Part Number	Description
GPS35190HR	Trimble GPS Carrier Module
GPS35190HR-xxx	GPS35190HR with Trimble BD970-xxx GPS
IDAN-GPS35190HRS	Trimble GPS Carrier Module in IDAN enclosure (Single High)
IDAN-GPS35190HRS-xxx	GPS35190HR with Trimble BD970-xxx GPS in IDAN enclosure (Single High)
IDAN-GPS35190HRD	Trimble GPS Carrier Module in IDAN enclosure (Double High)
IDAN-GPS35190HRD-xxx	GPS35190HR with Trimble BD970-xxx GPS in IDAN enclosure (Double High)

The Intelligent Data Acquisition Node (IDAN™) building block can be used in just about any combination with other IDAN building blocks to create a simple but rugged 104™ stack. This module can also be incorporated in a custom-built RTD HiDAN™ or HiDANplus High Reliability Intelligent Data Acquisition Node. Contact RTD sales for more information on our high reliability systems.

1.4 Contact Information

1.4.1 Sales Support

For sales inquiries, you can contact RTD Embedded Technologies sales via the following methods:

Phone: 1-814-234-8087 Monday through Friday, 8:00am to 5:00pm (EST).
E-Mail: sales@rtd.com

1.4.2 Technical Support

section of this manual.

For help with this product, or any other product made by RTD, you can contact RTD Embedded Technologies technical support via the following methods:

Phone: 1-814-234-8087 Monday through Friday, 8:00am to 5:00pm (EST).
E-Mail: techsupport@rtd.com

2 Specifications

2.1 Operating Conditions

Table 2: Operating Conditions

Symbol	Parameter	Test Condition	Min	Max	Unit
V_{cc5}	5V Supply Voltage		4.75	5.25	V
V_{cc3}	3.3V Supply Voltage		n/a	n/a	V
V_{cc12}	12V Supply Voltage		n/a	n/a	V
T_a	Operating Temperature		-40	+85	C
T_s	Storage Temperature		-55	+125	C
RH	Relative Humidity	Non-Condensing	0	90%	%
MTBF	Mean Time Before Failure	Telcordia Issue 2 30°C, Ground benign, controlled		2,602,250	Hours

2.2 Electrical Characteristics

Table 3: Electrical Characteristics

Symbol	Parameter		Test Condition	Min	Typical	Max	Unit
P	Power Consumption		V_{cc5} = 5.0V		0.5		W
I_{cc5}	5V Input Supply Current		Active		2.5		A
PCIe/104 Bus							
	Differential Output Voltage			0.8		1.2	V
	DC Differential TX Impedance			80		120	Ω
	Differential Input Voltage			0.175		1.2	V
	DC Differential RX Impedance			80		120	Ω
	Electrical Idle Detect Threshold			65		175	mV
CAN Port							
	Positive-going Input Threshold				750	900	mV
	Negative-going Input Threshold			500	650		mV
	Hysteresis Voltage				100		mV
	Input Resistance			20		50	KΩ
	Output Voltage (Dominant)	CAN-H		2.75	3.5	4.5	V
		CAN-L		0.5		2	
	Output Voltage (Recessive)	CAN-H		2	2.5	3	V
		CAN-L		2	2.5	3	
	Differential Output (Dominant)			1.2	2	3	V
	Differential Output (Recessive)			-120		12	mV
	Termination Resistor				121		Ω

3 Board Connection

3.1 Board Handling Precautions

To prevent damage due to Electrostatic Discharge (ESD), keep your board in its antistatic bag until you are ready to install it into your system. When removing it from the bag, hold the board at the edges, and do not touch the components or connectors. Handle the board in an antistatic environment, and use a grounded workbench for testing and handling of your hardware.

3.2 Physical Characteristics

- Weight: Approximately 80 g (0.18 lbs.)
- Dimensions: 90.17 mm L x 95.89 mm W (4.570 in L x 3.775 in W)

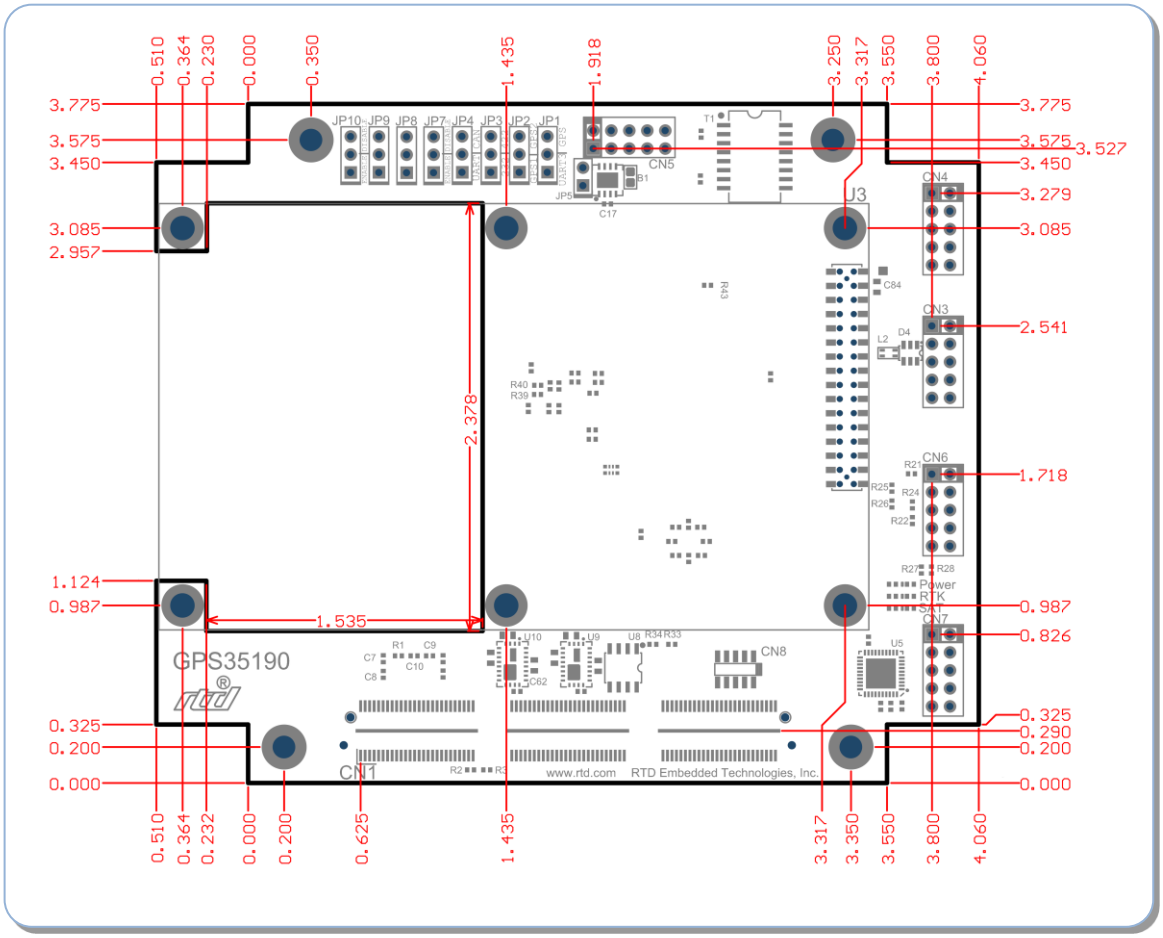

Figure 1: Board Dimensions

3.3 Connectors and Jumpers

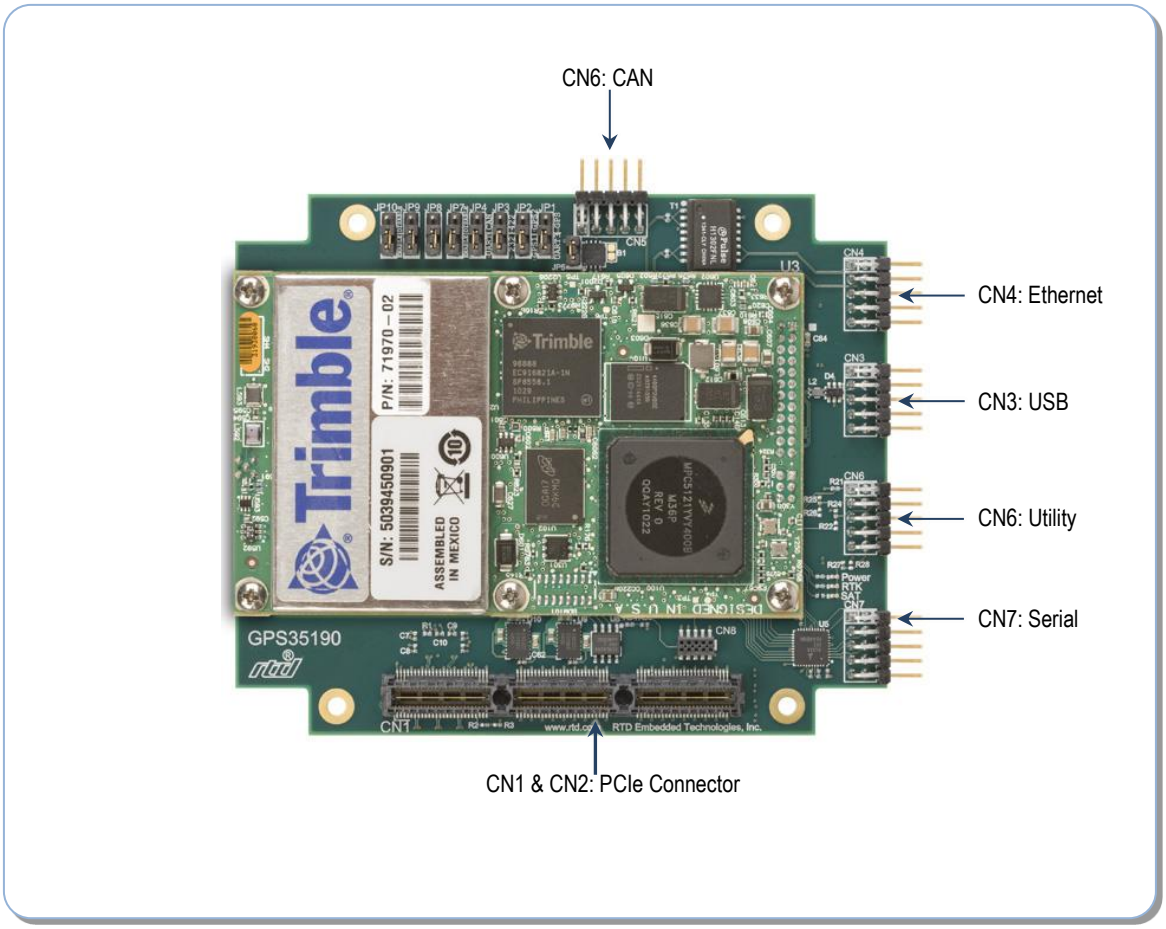

Figure 2: Board Connections

3.3.1 Bus Connectors

CN1(Top) & CN2(Bottom): PCIe Connector

The PCIe connector is the connection to the system CPU. The position and pin assignments are compliant with the *PCI/104-Express Specification*. (See PC/104 Specifications on page 26)

The GPS35190 is a "Universal" board and can connect to either a Type 1 or Type 2 PCIe/104 connector.

3.3.2 External I/O Connectors

CN7: Serial I/O Connector

CN7 is an RS-232/RS-422/RS-485 interface that can be configured to be a serial port off the CPU or one of the first two serial ports from the GPS. Table 4 and Table 5 is the pin out in RS-232 mode, if JP3 has pins 1 – 2 shorted.

Table 4: CN7 in UART RS-232 Mode

Pin Name	Pin #	Pin #	Pin Name
DSR	2	1	DCD
RTS	4	3	RxD
CTS	6	5	TxD
RI	8	7	DTR
GND	10	9	GND

Table 5: CN7 in GPS RS-232 Mode

Pin Name	Pin #	Pin #	Pin Name
-	2	1	-
RTS	4	3	RxD
CTS	6	5	TxD
-	8	7	-
GND	10	9	GND

Table 6 and Table 7 is the pin out of CN7 in RS422/485 mode, if JP3 has pins 2 – 3 shorted. Note that when connected to the UART, RTS is used to enable the driver. When connected to the GPS the driver is always enabled.

Table 6: CN7 in UART RS-422/485 Mode

Pin Name	Pin #	Pin #	Pin Name
-	2	1	-
TxD+	4	3	RxD-
RxD+	6	5	TxD-
-	8	7	-
GND	10	9	GND

Table 7: CN7 in GPS RS-422/485 Mode

Pin Name	Pin #	Pin #	Pin Name
-	2	1	-
TxD+	4	3	RxD-
RxD+	6	5	TxD-
-	8	7	-
GND	10	9	GND

CN6: GPS Utility Connector

CN6 is the GPS Utility connector. It contains the GPS external reset, a buffered 1 pulse-per-second with a 7 ns maximum delay, the GPS Event 1 input, and three GPS LED signals. All signals go through the EPLD so they are 5 volt tolerant and the LED signals are capable of +8/-4 mA. Table 8 is the pin out of the Utility connector.

Table 8: CN6 GPS Utility

Pin Name	Pin #	Pin #	Pin Name
1PPS	2	1	Reset
Event1	4	3	GND
3.3V	6	5	RTK LED
3.3V	8	7	PWR LED
3.3V	10	9	SAT LED

CN3: GPS USB Connector

CN3 is the GPS USB port. It connects directly to the GPS USB port. Table 9 is the pin out of the USB connector.

Table 9: CN3 GPS USB

Pin Name	Pin #	Pin #	Pin Name
Rsvd	2	1	Rsvd
Rsvd	4	3	USB+
Rsvd	6	5	USB-
GND	8	7	GND
GND	10	9	GND

CN4: GPS 10/100 Mbps Ethernet Connector

CN4 is the GPS 10/100 Mbps Ethernet port. The GPS35190 provides the magnetics required to connect the GPS directly to 10/100 Mbps network. It is full duplex with auto-negotiation enabled. Table 10 is the pin out of the Ethernet connector.

Table 10: CN4 GPS Ethernet

Pin Name	Pin #	Pin #	Pin Name
RX-	2	1	RX+
Term	4	3	Term
TX-	6	5	TX+
Term	8	7	Term
GND	10	9	GND

CN5: GPS CAN Bus Connector

CN5 is the GPS CAN Bus port. The GPS35190 provides the CAN transceiver required to connect the GPS directly to CAN network. This requires the GPS module to configure COM3 as CAN. Jumper JP4 controls the GPS to CAN transceiver connection. If JP4 has pins 1 – 2 shorted GPS COM3 is connected to the UART channel 3. If JP4 has pins 2 – 3 shorted GPS COM3 is connected to the CAN transceiver. Table 11 is the pin out of the Ethernet connector.

Table 11: CN5 GPS CAN

Pin Name	Pin #	Pin #	Pin Name
GND	2	1	Rsvd
CAN-H	4	3	CAN-L
Rsvd	6	5	GND
+5V[1]	8	7	Rsvd
Rsvd	10	9	GND

[1] Only Available when B1 is shorted

Note: CN8 is for Factory Use only

3.3.3 JUMPERS

JP1 and JP2: CN7 Serial Port Source

JP1 and JP2 are 3-pin two position jumpers that are used to select if the UART or a GPS serial port is connected to CN7. These jumpers affect UART serial ports 1, 2, and 4 as well as GPS serial ports 1 and 2. Table 12 has JP1 and JP2 setting information.

Table 12: JP1 and JP2 Settings

JP1 Setting	JP2 Setting	Description	Notes
1 – 2	Any Position	GPS serial port 1 connected to UART serial port 1 GPS serial port 2 connected to UART serial port 2 UART serial port 4 is connected to CN7	Factory default is 1 – 2 for both JP1 and JP2
2 – 3	1 – 2	GPS serial port 1 connected to CN7 GPS serial port 2 connected to UART serial port 2 UART serial port 1 monitors GPS serial port 1 UART serial port 4 is unused	
	2 – 3	GPS serial port 1 connected to UART serial port 1 GPS serial port 2 connected to CN7 UART serial port 2 monitors GPS serial port 2 UART serial port 4 is unused	

JP3: CN7 Serial Port Mode

JP3 is used to select the mode of serial port CN7. The options are shown in Table 13.

Table 13: JP3 Settings

Setting	Description	Notes
1 – 2	RS-232	Factory default
2 – 3	RS-422/485	

Note that in RS-422 mode when connected to the UART (JP1 is 1 – 2) RTS is used to enable the driver. When connected to the GPS (JP1 is 2 – 3) the driver is always enabled.

JP4: GPS Serial Port 3 Connection

JP4 is used to select the connection of GPS serial port 3. The options are shown in Table 14.

Table 14: JP4 Settings

Setting	Description	Notes
1 – 2	GPS serial port 3 connected to UART serial port 3	Factory default

Table 14: JP4 Settings

Setting	Description	Notes
2 – 3	GPS serial port 3 connected to CAN transceiver CN5 UART serial port 3 monitors GPS serial port 1	

JP5: CAN Bus Termination

JP5 is used terminate the CAN bus. If this device is not at the end of the CAN bus, remove this jumper. The options are shown in Table 15: JP5 Settings.

Table 15: JP5 Settings

Setting	Description	Notes
1 – 2 Short	CAN Bus Terminated	Factory default
1 – 2 Open	CAN Bus Not Terminated	

JP7: GPS Software Reset

JP7 is used enable/disable the DTR GPS reset. The options are shown in Table 16.

Table 16: JP7 Settings

Setting	Description	Notes
1 – 2	DTR GPS Reset is Enabled	Factory default
2 – 3	DTR GPS Reset is Disabled	

JP10: GPS Carrier Detect

The GPS35190 provides the 1 PPS signal to Carrier Detect when the GPS serial port is connected to a UART port. JP10 is used enable/disable the GPS sending the 1PPS signal to the serial carrier detect. The options are shown in Table 17.

Table 17: JP8 Settings

Setting	Description	Notes
1 – 2	1PPS is connected to Carrier Detect	Factory default
2 – 3	1PPS is disconnected from Carrier Detect	

Note: JP8 and JP9 is for Factory Use only

3.3.4 LEDs

Power LED

The Power LED is connected to the POWER LED signal of the GPS. It is on when power is applied to the GPS module.

Real-Time Kenematic LED

The RTK LED is connected to the RTK LED signal of the GPS. It flashes slowly when an RTK correction is present.

Satellite LED

The Satellite (SAT) LED is connected to the SAT LED signal of the GPS. It flashes rapidly to indicate less than 5 satellites and slowly flashes to indicate more than 5 satellites.

3.4 Steps for Installing

1. Always work at an ESD protected workstation, and wear a grounded wrist-strap.
2. Turn off power to the PC/104 system or stack.
3. Select and install stand-offs to properly position the module on the stack.
4. Remove the module from its anti-static bag.
5. Check that pins of the bus connector are properly positioned.
6. Check the stacking order; make sure all of the busses used by the peripheral cards are connected to the cpuModule.
7. Hold the module by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
8. Gently and evenly press the module onto the PC/104 stack.
9. If any boards are to be stacked above this module, install them.
10. Attach any necessary cables to the PC/104 stack.
11. Re-connect the power cord and apply power to the stack.
12. Boot the system and verify that all of the hardware is working properly.

NOTE: When using under Windows, the GPS may be incorrectly detected as a Serial Mouse, causing erratic mouse cursor behavior. This issue has been documented by Microsoft. For more information, refer to Microsoft Knowledge Base Article 283063.

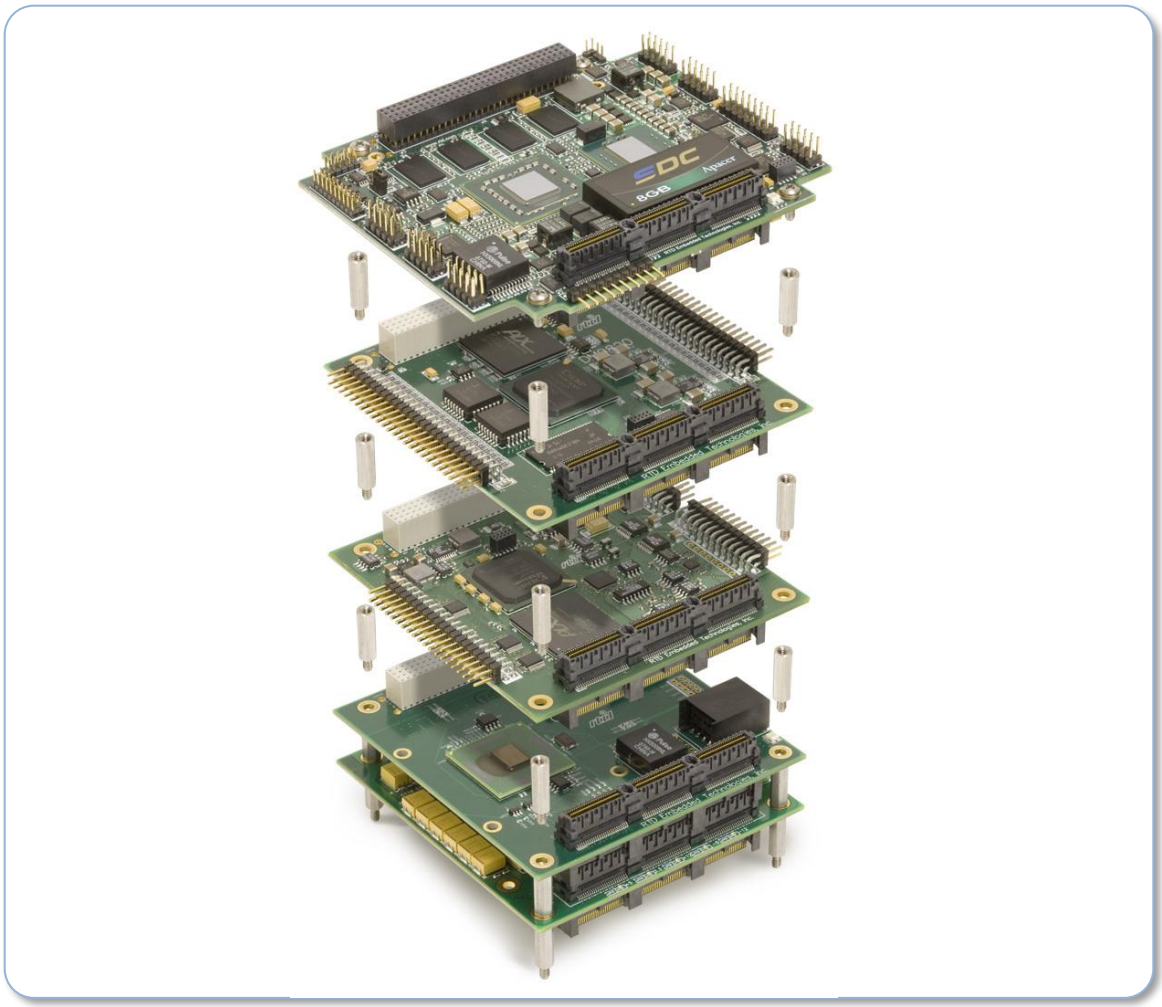

Figure 3: Example 104™ Stack

4 IDAN-GPS35190HRS Connections

4.1 Module Handling Precautions

To prevent damage due to Electrostatic Discharge (ESD), keep your module in its antistatic bag until you are ready to install it into your system. When removing it from the bag, hold the module by the aluminum enclosure, and do not touch the components or connectors. Handle the module in an antistatic environment, and use a grounded workbench for testing and handling of your hardware.

4.2 Physical Characteristics

- Weight: Approximately 0.21 Kg (0.46 lbs.)
- Dimensions: 152 mm L x 130 mm W x 129.97mm H (5.983 in L x 5.117 in W x 0.669 in H)

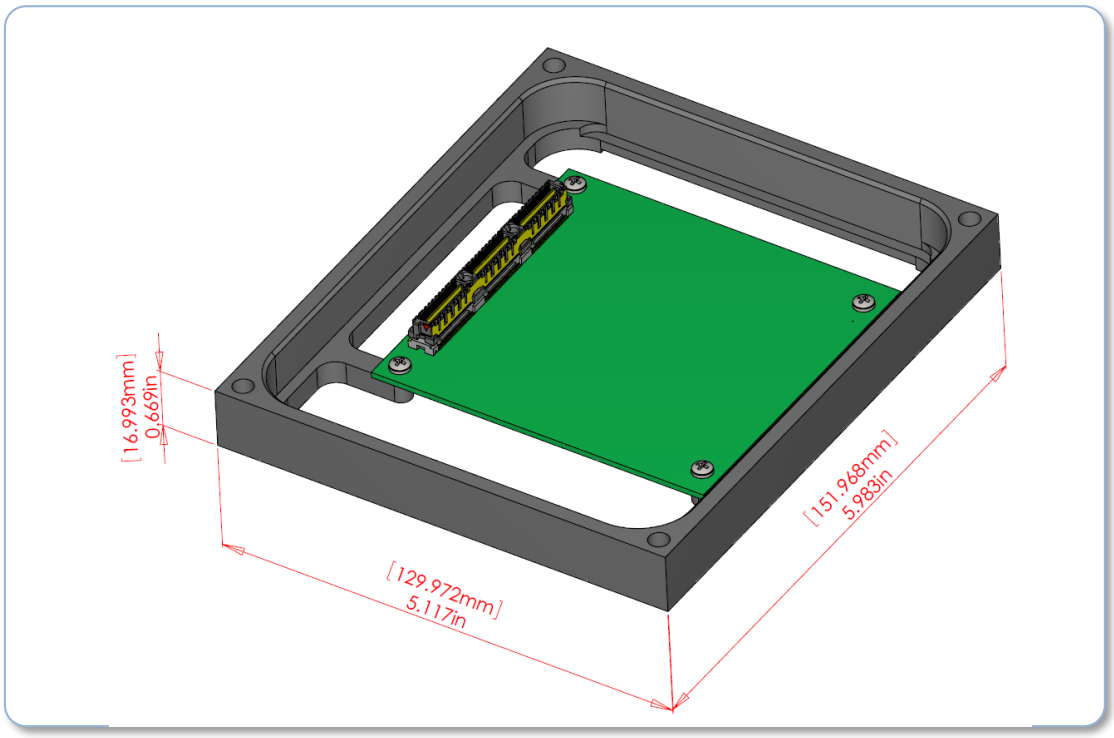

Figure 4: IDAN Dimensions

4.3 Connectors

4.3.1 Bus Connectors

CN1(Top) & CN2(Bottom): PCIe Connector

The PCIe connector is the connection to the system CPU. The position and pin assignments are compliant with the *PCI/104-Express Specification*. (See PC/104 Specifications on page 26)

The GPS35190 is a "Universal" board and can connect to either a Type 1 or Type 2 PCIe/104 connector.

4.3.2 EXTERNAL I/O CONNECTORS

Utility Connector - 9-pin "D" Female Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 18: IDAN-GPS35190 Utility Connector

IDAN Pin#	Signal	GPS35190 Pin #	
1	Reset	CN6	1
2	GND	CN6	3
3	RTK LED	CN6	5
4	PWR LED	CN6	7
5	SAT LED	CN6	9
6	1 PPS	CN6	2
7	Event1	CN6	4
8	3.3V	CN6	6
9	3.3V	CN6	8

GPS Antenna - SMA Female Connector

Connector Part #: SPC Technology 8589-0853 **Example Mating Connector:** Amp 901-9877-RFX

4.4 Steps for Installing

1. Always work at an ESD protected workstation, and wear a grounded wrist-strap.
2. Turn off power to the IDAN system.
3. Remove the module from its anti-static bag.
4. Check that pins of the bus connector are properly positioned.
5. Check the stacking order; make sure all of the busses used by the peripheral cards are connected to the cpuModule.
6. Hold the module by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
7. Gently and evenly press the module onto the IDAN system.
8. If any boards are to be stacked above this module, install them.
9. Finish assembling the IDAN stack by installing screws of an appropriate length.
10. Attach any necessary cables to the IDAN system.
11. Re-connect the power cord and apply power to the stack.
12. Boot the system and verify that all the hardware is working properly.

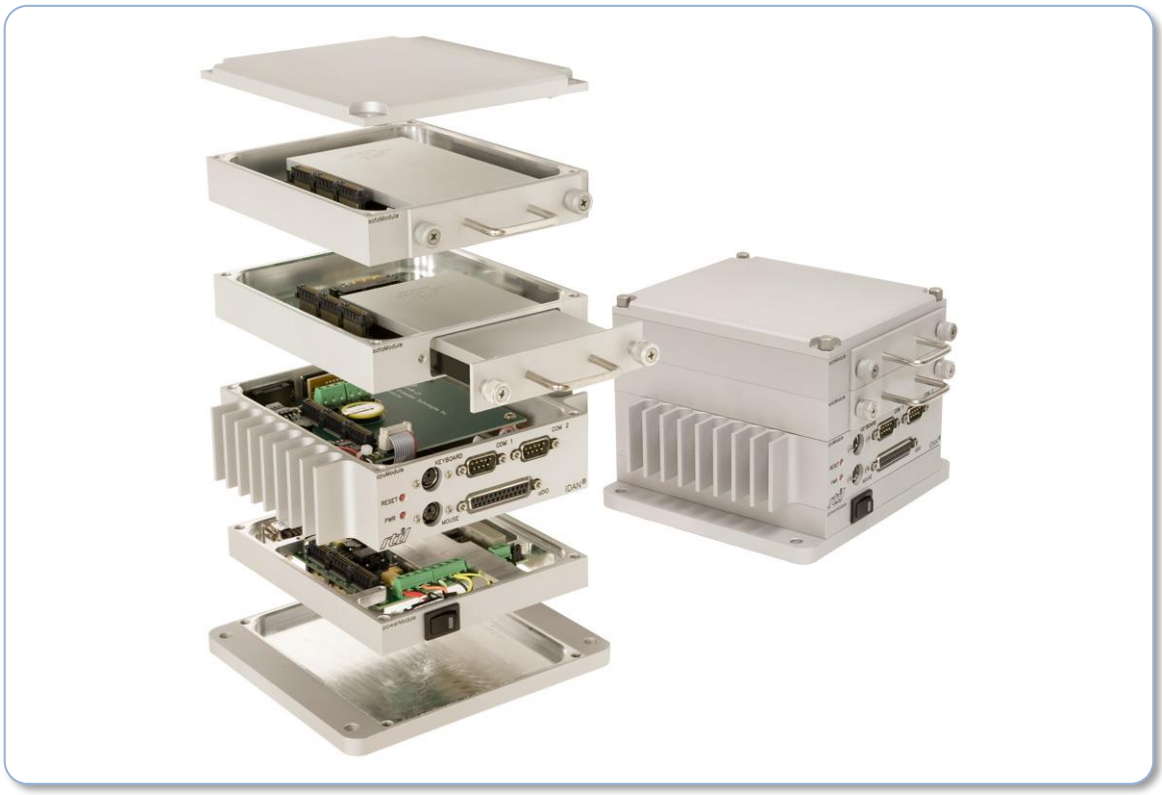

Figure 5: Example IDAN System

5 IDAN-GPS35190HRD Connections

5.1 Module Handling Precautions

To prevent damage due to Electrostatic Discharge (ESD), keep your module in its antistatic bag until you are ready to install it into your system. When removing it from the bag, hold the module by the aluminum enclosure, and do not touch the components or connectors. Handle the module in an antistatic environment, and use a grounded workbench for testing and handling of your hardware.

5.2 Physical Characteristics

- Weight: Approximately 0.42 Kg (0.96 lbs.)
- Dimensions: 152 mm L x 130 mm W x 34 mm H (5.983 in L x 5.117 in W x 0.669 in H)

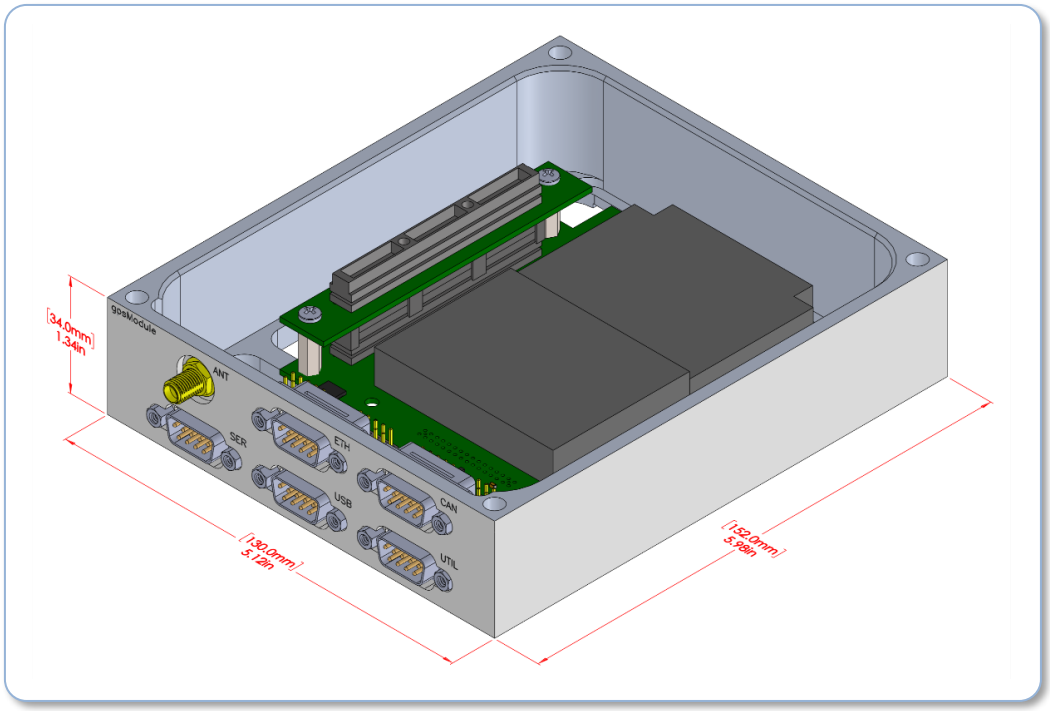

Figure 6: IDAN Dimensions

5.3 Connectors

5.3.1 Bus Connectors

CN1(Top) & CN2(Bottom): PCIe Connector

The PCIe connector is the connection to the system CPU. The position and pin assignments are compliant with the *PCI/104-Express Specification*. (See PC/104 Specifications on page 26)

The GPS35190 is a "Universal" board, and can connect to either a Type 1 or Type 2 PCIe/104 connector.

5.3.2 External I/O Connectors

Utility Connector - 9-pin "D" Female Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 19: IDAN-GPS35190 Utility Connector

IDAN Pin#	Signal	GPS35190 Pin #	
1	Reset	CN6	1
2	GND	CN6	3
3	RTK LED	CN6	5
4	PWR LED	CN6	7
5	SAT LED	CN6	9
6	1 PPS	CN6	2
7	Event1	CN6	4
8	3.3V	CN6	6
9	3.3V	CN6	8

Ethernet Connector - 9-pin "D" Male Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 20: IDAN-GPS35190 Ethernet Connector

IDAN Pin#	Signal	GPS35190 Pin #	
1	RX+	CN4	1
2	Term	CN4	3
3	TX+	CN4	5
4	Term	CN4	7
5	GND	CN4	9
6	RX-	CN4	2
7	Term	CN4	4
8	TX-	CN4	6
9	Term	CN4	8

CAN Connector - 9-pin "D" Male Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 21: IDAN-GPS35190 CAN Connector

IDAN Pin#	Signal	GPS35190 Pin #	
1	Rsvd	CN5	1
2	CAN-L	CN5	3
3	GND	CN5	5
4	Rsvd	CN5	7
5	GND	CN5	9
6	GND	CN5	2
7	CAN-H	CN5	4
8	Rsvd	CN5	6
9	+5V[2]	CN5	8

Serial Connector - 9-pin "D" Male Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 22: IDAN-GPS35190 Serial Connector

[2] Only Available when B1 is shorted

IDAN Pin#	Signal(RS-232)	(RS-232)	GPS35190 Pin #	
1	DCD	-	CN7	1
2	RxD	RxD-	CN7	3
3	TxD	TxD-	CN7	5
4	DTR	-	CN7	7
5	GND	GND	CN7	9
6	DSR	-	CN7	2
7	RTS	TxD+	CN7	4
8	CTS	RxD+	CN7	6
9	RI	-	CN7	8

USB Connector - 9-pin "D" Male Connector

Connector Part #: Amp 1658610-4 **Example Mating Connector:** Amp 1658608-4

Table 23: IDAN-GPS35190 USB Connector

IDAN Pin#	Signal	GPS35190 Pin #	
1	Rsvd	CN3	1
2	USB+	CN3	3
3	USB-	CN3	5
4	GND	CN3	7
5	GND	CN3	9
6	Rsvd	CN3	2
7	Rsvd	CN3	4
8	Rsvd	CN3	6
9	GND	CN3	8

GPS Antenna - SMA Female Connector

Connector Part #: SPC Technology 8589-0853 **Example Mating Connector:** Amp 901-9877-RFX

5.4 Steps for Installing

13. Always work at an ESD protected workstation, and wear a grounded wrist-strap.
14. Turn off power to the IDAN system.
15. Remove the module from its anti-static bag.
16. Check that pins of the bus connector are properly positioned.
17. Check the stacking order; make sure all of the busses used by the peripheral cards are connected to the cpuModule.
18. Hold the module by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
19. Gently and evenly press the module onto the IDAN system.
20. If any boards are to be stacked above this module, install them.
21. Finish assembling the IDAN stack by installing screws of an appropriate length.
22. Attach any necessary cables to the IDAN system.
23. Re-connect the power cord and apply power to the stack.
24. Boot the system and verify that all of the hardware is working properly.

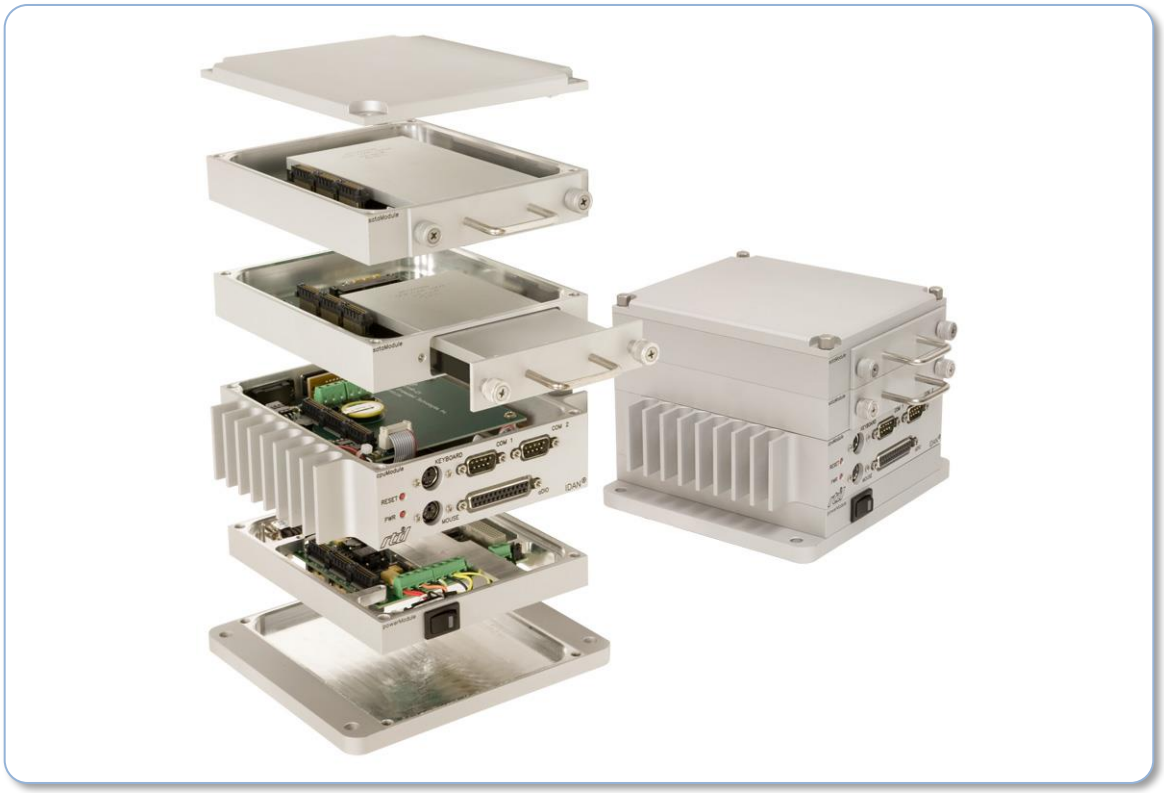

Figure 7: Example IDAN System

6 Functional Description

6.1 Block Diagram

The Figure below shows the functional block diagram of the GPS35190. The various parts of the block diagram are discussed in the following sections.

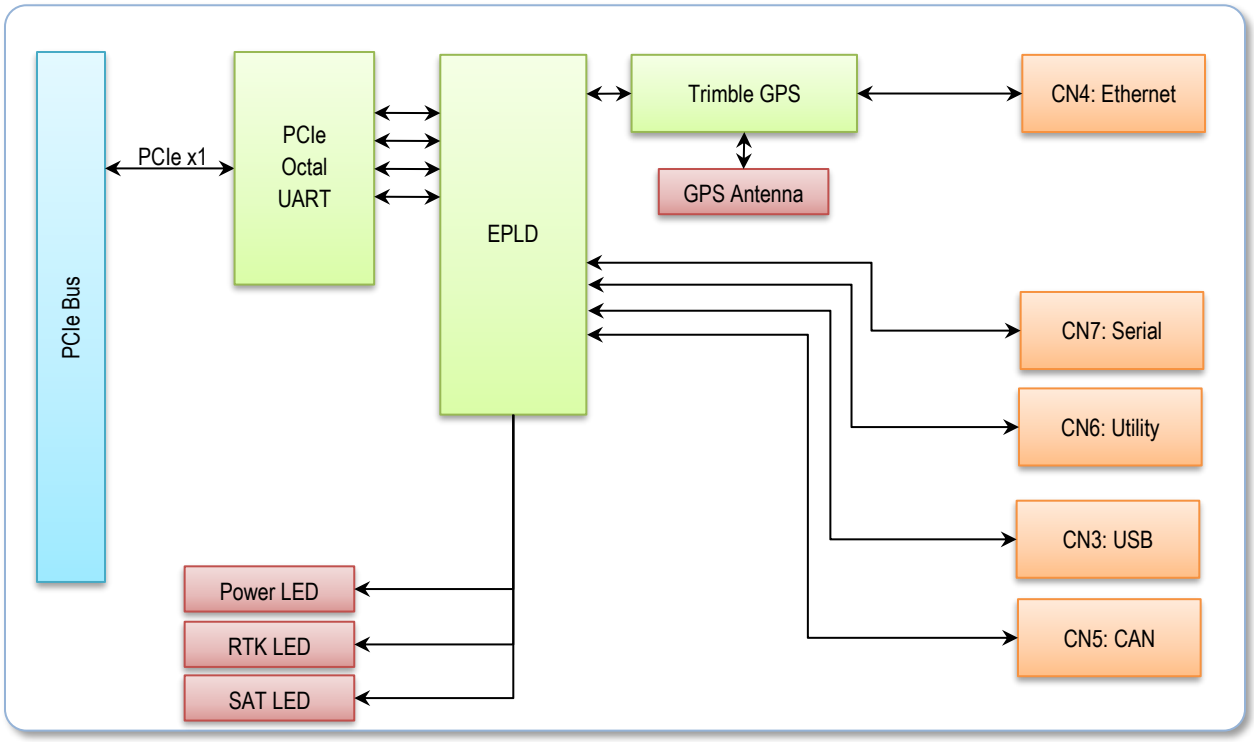

Figure 8: GPS35190 Block Diagram

6.2 GPS Interface

The GPS35190 is a carrier board for a Trimble GPS receiver. It provides a octal UART interface to the PCIe bus that can be connected to all three serial ports of the GPS and serial connector CN7. Optionally, one of the GPS serial ports can be connected to CN7. If the GPS module has CAN bus capability on the third serial port, it can be connected to an onboard CAN transceiver. The GPS antenna connects directly to the GPS module.

6.2.1 PCIe Octal UART

The GPS35190 provides eight independent UARTs. By default they are connected as follows:

- UART 1 to GPS COM1
- UART 2 to GPS COM2
- UART 3 to GPS COM3
- UART 4 to serial port connector CN7
- UART 5, UART 6, UART 7 and UART 8 are unused.

Jumper JP1 and JP2 selection may disable some of these ports to allow the GPS COM ports to connect to serial connector CN7 or CAN connector CN5. Refer to Jumpers on page 12.

6.2.2 DTR GPS Reset

The DTR signal of the first UART is used to generate a GPS reset signal. A reset pulse will be generated when the DTR signal transition from asserted to de-asserted (MCR bit 0 transitions from 1 to 0). JP7 needs set to 1-2 to enable this function.

7 Software

7.1 Installing the Software

The GPS35190 use a PCIe UART which will require software and drivers for proper operation. Drivers are provided for Windows XP/7, DOS, and Linux Kernel 2.6.37 and newer.

The drivers are provided on the companion CD and are also available on the RTD web site (http://www.rtd.com) for download.

7.2 Serial Port Configuration

A software utility is required to configure serial port mode and termination setting. This utility along with source code for the utility is provided on the companion CD and is also available on the RTD web site (http://www.rtd.com) for download.

For additional support concerning the software utility please contact RTD tech support.

7.3 Software Programming

7.3.1 API Interface

Once the drivers for the GPS35190 have been properly loaded, all eight RS-232/422/485 ports should be available as standard serial ports. All eight ports can then be controlled using the standard serial port interfaces built into the operating system.

A description of serial port programming for operating systems is beyond the scope of this manual. Consult the operating system documentation for information on how to interface with serial ports via software.

7.3.2 COM Port Numbering

Serial ports (aka COM ports) are typically assigned numbers by the operating system (e.g. COM1). These numbers are typically dynamically assigned by the operating system. However, different applications may enumerate the COM ports differently, assigning different port numbers (e.g. COM3-10 vs COM5-12). When developing your own serial port application, consult your operating system's documentation for the proper method of enumerating COM ports.

Note:	Some applications are written to assume that no more than four COM ports are present in a system. These applications may have compatibility issues with the Exar PCIe UART.

7.3.3 Base Address and Register Mapping

The GPS35190 exposes all of the registers available on the Exar XR17V358. The register set of the XR17V358 mimics the standard 16C550 UART register map. However, the XR17V358 contains some additional registers not found in a typical ISA-based UART.

Additionally, the base address of the GPS35190's serial ports will be different than the standard PC serial port locations (0x3F8, 0x2F8, etc). The GPS35190 is a memory mapped device. Since it is PCI-based, it may be mapped to any location within the 4GB address space of the CPU. The base address of PCI devices is determined by the CPU's BIOS and operating system at boot time.

The register-level differences between the GPS35190 and a standard 16C550 UART should be abstracted via the software drivers. Most users will not need to concern themselves with the actual registers of the board. If one is interested in directly accessing the registers of the board, consult the XR17V358 data sheet available from Exar.

8 GPS Configuration

RTD configures the BD970 GPS module differently than Trimble. If the BD970 was purchased from RTD, it comes configured with the following settings:

- The default username and password are ***admin*** and ***Trimb!eGP$***, respectively.
- The CAN bus is enabled.
- GPS messages are enabled:
  - *I/O Config → COM1*
    - *GGA* to 1Hz
    - *RMC* to 1Hz
    - *Legacy Talker ID* enabled
  - *I/O Config → CAN*
    - *GGA* to 1Hz

If the BD970 was purchased directly from Trimble, check the Trimble website (https://oemgnss.trimble.com) for the default configuration.

9 Troubleshooting

If you are having problems with your system, please try the following initial steps:

- **Simplify the System** – Remove modules one at a time from your system to see if there is a specific module that is causing a problem. Perform you troubleshooting with the least number of modules in the system possible.

- **Swap Components** – Try replacing parts in the system one at a time with similar parts to determine if a part is faulty or if a type of part is configured incorrectly.

If problems persist, or you have questions about configuring this product, contact RTD Embedded Technologies via the following methods:

Phone: +1-814-234-8087
E-Mail: techsupport@rtd.com

Be sure to check the RTD web site (http://www.rtd.com) frequently for product updates, including newer versions of the board manual and application software.

10 Additional Information

10.1 PC/104 Specifications

A copy of the latest PC/104 specifications can be found on the webpage for the PC/104 Embedded Consortium:

www.pc104.org

10.2 PCI and PCI Express Specification

A copy of the latest PCI and PCI Express specifications can be found on the webpage for the PCI Special Interest Group:

www.pcisig.com

11 Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD Embedded Technologies, Inc. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, RTD Embedded Technologies will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD Embedded Technologies. All replaced parts and products become the property of RTD Embedded Technologies. Before returning any product for repair, customers are required to contact the factory for a Return Material Authorization (RMA) number.

This limited warranty does not extend to any products which have been damaged as a result of accident, misuse, abuse (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD Embedded Technologies, “acts of God” or other contingencies beyond the control of RTD Embedded Technologies), or as a result of service or modification by anyone other than RTD Embedded Technologies. Except as expressly set forth above, no other warranties are expressed or implied, including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose, and RTD Embedded Technologies expressly disclaims all warranties not stated herein. All implied warranties, including implied warranties for merchantability and fitness for a particular purpose, are limited to the duration of this warranty. In the event the product is not free from defects as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. Under no circumstances will RTD Embedded Technologies be liable to the purchaser or any user for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of the use or inability to use the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages for consumer products, and some states do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RTD Embedded Technologies, Inc.
103 Innovation Boulevard
State College, PA 16803 USA
Telephone: 814-234-8087
Fax: 814-234-5218

www.rtd.com

sales@rtd.com
techsupport@rtd.com

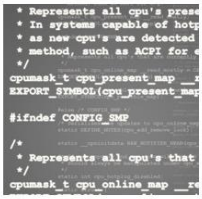

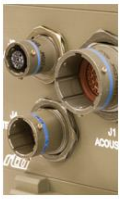
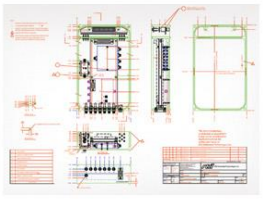

Copyright 2021 by RTD Embedded Technologies, Inc. All rights reserved.