LAN35H108HR / LAN35E08HR

Gigabit Ethernet Unmanaged Switches

User's Manual

BDM-610020161 C

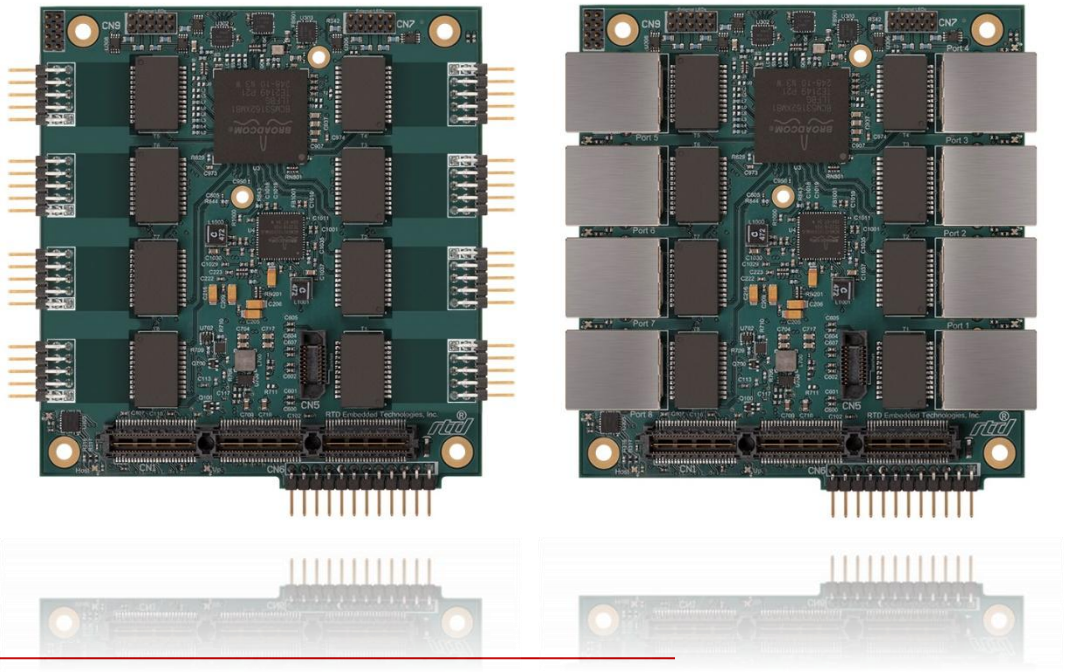

RTD Embedded Technologies, Inc.
AS9100 and ISO 9001 Certified

RTD Embedded Technologies, Inc.
103 Innovation Boulevard
State College, PA 16803 USA
Telephone: 814-234-8087
Fax: 814-234-5218

www.rtd.com

sales@rtd.com
techsupport@rtd.com

PC/104

DESIGNED AND MADE IN THE UNITED STATES

AS9100 - ISO 9001 CERTIFIED

Revision History

Rev A	Initial Release
Rev B	Added MTBF
Rev C	AddedLAN35E08

Advanced Analog I/O, Advanced Digital I/O, aAIO, aDIO, a2DIO, Autonomous SmartCal, "Catch the Express", cpuModule, dspFramework, dspModule, eBuild, expressMate, ExpressPlatform, "MIL Value for COTS prices", multiPort, PlatformBus, and PC/104EZ are trademarks, and "Accessing the Analog World", dataModule, IDAN, HiDAN, HiDANplus, RTD, the RTD logo, and StackNET are registered trademarks of RTD Embedded Technologies, Inc. (formerly Real Time Devices, Inc.). PS/2 is a trademark of International Business Machines Inc. PCI, PCI Express, and PCIe are trademarks of PCI-SIG. PC/104, PC/104-Plus, PCI-104, PCIe/104, PCI/104-Express and 104 are trademarks of the PC/104 Consortium. All other trademarks appearing in this document are the property of their respective owners.

Failure to follow the instructions found in this manual may result in damage to the product described in this manual, or other components of the system. The procedure set forth in this manual shall only be performed by persons qualified to service electronic equipment. Contents and specifications within this manual are given without warranty, and are subject to change without notice. RTD Embedded Technologies, Inc. shall not be liable for errors or omissions in this manual, or for any loss, damage, or injury in connection with the use of this manual.

Copyright © 2026 by RTD Embedded Technologies, Inc. All rights reserved.

Table of Contents

1 Introduction **6**

1.1 Product Overview ... 6

1.2 Board Features ... 6

1.3 Ordering Information ... 7

Contact Information ... 8

1.3.1 Sales Support 8

1.3.2 Technical Support 8

2 Specifications **9**

2.1 Operating Conditions ... 9

2.2 Electrical Characteristics ... 9

3 Board Connection **10**

3.1 Board Handling Precautions ... 10

3.2 Physical Characteristics ... 10

3.3 Connectors and Jumpers ... 12

3.3.1 External I/O Connectors 13

3.3.2 10-pin DIL Twisted Pair Ethernet, Port 1 – Port 8 (LANx108HR-D only) 13

3.3.3 RJ45 Twisted Pair Ethernet, Port 1 – Port 8 (LANx08HR-RJ only) 13

3.3.4 12-pin SIL Power, CN6 (LAN35H108HR only) 14

3.3.5 Status LEDs 14

3.3.6 External Status LED Connectors CN7 and CN9 14

3.3.7 CN1 (Top) & CN2 (Bottom) Bus Connectors 15

3.4 Board LEDs ... 16

3.5 Steps for Installing ... 17

4 Heatsink **18**

4.1 Heatsink Dimensions ... 18

5 IDAN® Connections **19**

5.1 Module Handling Precautions ... 19

5.2 Physical Characteristics ... 19

5.3 IDAN® Versions ... 19

5.3.1 IDAN-LAN35H108HR 19

5.4 Steps for Installing ... 22

6 Functional Description **23**

6.1 Block Diagrams ... 23

6.2 Broadcom Gig-Ethernet Switch ... 24

6.3 Jumbo Frame Support ... 24

6.4 Intel WGI210IS Gigabit Ethernet Controller ... 25

6.5 Onboard LEDs and External LED Connectors ... 25

7 Troubleshooting **26**

8 Additional Information **27**

8.1 PC/104 Specifications ... 27

8.2 PCI and PCI Express Specification ... 27

9 Limited Warranty **28**

Table of Figures

Figure 1: LAN35H108HR-D Board Dimensions 10
Figure 2: LAN35H108HR-RJ Board Dimensions 11
Figure 3: LAN35H108HR-D Board Connections 12
Figure 4: LAN35H108HR-RJ Board Connections 12
Figure 5: RJ-45 Jack Connector 13
Figure 6: External LED Drive Circuit 14
Figure 7: LAN35H108HR-D Board LEDs 16
Figure 8: LAN35H108HR-RJ Board LEDs 16
Figure 9: Example 104™ Stack 17
Figure 10: Heatsink Dimensions 18
Figure 11: IDAN® Dimensions 19
Figure 12: IDAN-LAN35H108HR Front View 20
Figure 13: IDAN-LAN35H108HR Rear View 21
Figure 14: Example IDAN® System 22
Figure 15: LAN35H108HR Block Diagram 23
Figure 16: IDAN-LAN35H108HR Block Diagram 23
Figure 17: LAN35E08HR Block Diagram 24
Figure 18: IDAN-LAN35E08HR Block Diagram 24

Table of Tables

Table 1: Ordering Options 7
Table 2: Operating Conditions 9
Table 3: Electrical Characteristics 9
Table 4: Ethernet Signal Assignments 13
Table 5: RJ45 Signal Assignments 13
Table 6: Power Signal Assignments 14
Table 7: Status LEDs 14
Table 8: CN7 External LED Drive 15
Table 9: CN8 External LED Drive 15
Table 10: IDAN-LAN35H108HR Front Connector Pin Out 20
Table 11: IDAN-LAN35H108HR Rear Connector Pin Out 21

1 Introduction

1.1 Product Overview

The LAN35H108HR is stackable 10-port unmanaged Gigabit Ethernet switches for expanding the networking capabilities of any system. The boards can be used either in a PCIe/104 system or as a standalone stackable switch. In a stack the LAN35H108HR has a host interface x1 PCI Express link for an onboard Gigabit Ethernet controller that is connected to one port of the switch. The LAN35E08HR does not have an Ethernet controller and is designed to stack above an LAN35H108HR / LAN35H08HR or another LAN35E08HR to provide additional switch ports.

As standalone modules they each provide eight Ethernet ports any one of which can be the upstream port and the remaining will be downstream ports. This board is compatible with all PCI Express cpuModules and has only the PCIe/104 connector. The boards are available in IDAN® frames with two 37-pin "D" connectors.

1.2 Board Features

- LAN35H108HR with host interface
  - PCIe/104 PCI Express x1 link to onboard Intel WGI210IS Gigabit Ethernet controller connects to one switch port
  - 8 ports brought to 10-pin DIL I/O connectors
  - 1 port for up stacking switch expansion with LAN35E08HR modules
  - Power connector for standalone applications
- LAN35H08HR switch expansion
  - PCIe/104 stack through connector for power only
  - 1 port for stack down expansion connector
    - Note: The stackdown connector is not PC/104 compliant, so exercise care if placing it above something other than a LAN35H108HR or another LAN35E08HR. Standalone applications should use the LAN35H108HR.
  - 8 ports brought to 10-pin DIL I/O connectors
  - 1 port for up stacking switch expansion with LAN35E08HR modules
- I/O Connector Options
  - –D has eight 10-pin 0.1" dual-inline connectors
  - –RJ has eight RJ-45 connectors
  - LAN35H108HR has a power connector
  - IDAN has two 37-pin "D" connectors
- One BroadCom BCM53162X Gigabit Ethernet Switches:
  - 10 Full Duplex Unmanaged Gigabit Ethernet Ports
  - Any port can be the uplink, remaining links will be downlinks.
  - Ports have automatic MDI crossover to eliminate the need for crossover cables
  - Supports Jumbo frames up to 9720 bytes
  - Industrial Temperature rated: -40 to +85 C with supplied passive heatsink
- PCIe/104 Universal interface operates on Type 1 and Type 2 PCIe/104 buses
- PCI Express Bus:
  - Provides 2.5 Gbps in each direction
  - Single lane and single Virtual Channel operation
    - Compatible with multi-Virtual Channel chipsets
  - Packetized serial traffic with PCI Express Split Completion protocol
  - Data Link Layer Cyclic Redundancy Check (CRC) generator and checker
  - Automatic Retry of bad packets
  - In-band interrupts and messages
  - Message Signaled Interrupt (MSI) support

1.3 Ordering Information

The LAN35H108HR & LAN35E08HR are available with the following options:

Table 1: Ordering Options

Part Number	Description
LAN35H108HR-RJ	8-port Gigabit Ethernet Switch with host interface and PCIe/104 bus with RJ-45 and power connectors
LAN35H108HR-D	8-port Gigabit Ethernet Switch with host interface and PCIe/104 bus with 10-pin DIL and power connectors
LAN35E08HR-RJ	8-port Gigabit Ethernet Switch expansion with PCIe/104 bus and RJ-45 connectors
LAN35E08HR-D	8-port Gigabit Ethernet Switch expansion with PCIe/104 bus and 10-pin DIL connectors
IDAN-LAN35E08HRS	8-port Gigabit Ethernet Switch expansion in IDAN enclosure with two 37-pin "D" connectors and PCIe/104 bus
IDAN-XKCM48	Cable kit for IDAN-LAN35H08HRS and IDAN-LAN35E08HRS to break the 37-pin "D" connectors to RJ-45.

The Intelligent Data Acquisition Node (IDAN®) building block can be used in just about any combination with other IDAN building blocks to create a simple but rugged 104™ stack. This module can also be incorporated in a custom-built RTD HiDAN® or HiDAN*plus*® High Reliability Intelligent Data Acquisition Node. Contact RTD sales for more information on our high reliability systems.

Contact Information

1.3.1 Sales Support

For sales inquiries, you can contact RTD Embedded Technologies sales via the following methods:

Phone: 1-814-234-8087 Monday through Friday, 8:00am to 5:00pm (EST).
E-Mail: sales@rtd.com

1.3.2 Technical Support

If you are having problems with you system, please try the steps in the Troubleshooting section of this manual.

For help with this product, or any other product made by RTD, you can contact RTD Embedded Technologies technical support via the following methods:

Phone: 1-814-234-8087 Monday through Friday, 8:00am to 5:00pm (EST).
E-Mail: techsupport@rtd.com

2 Specifications

2.1 Operating Conditions

Table 2: Operating Conditions

Symbol	Parameter	Test Condition	Min	Max	Unit
V_{cc5}	5V Supply Voltage		4.75	5.25	V
V_{cc3}	3.3V Supply Voltage		n/a	n/a	V
V_{cc12}	12V Supply Voltage		n/a	n/a	V
T_a	Operating Temperature		-40	+85	C
T_s	Storage Temperature		-55	+125	C
RH	Relative Humidity	Non-Condensing	0	90%	%
MTBF	Mean Time Before Failure	Telcordia Issue 2 30°C, Ground benign, controlled		527,254	Hours

2.2 Electrical Characteristics

Table 3: Electrical Characteristics

Symbol	Parameter	Test Condition	Min	Typ	Max	Unit
Power +5V	LAN35H108HR Power Consumption	MAC/Phy linked at 1Gbps MAC/Phy plus 1 port linked at 1Gbps MAC/Phy plus 2 ports linked at 1Gbps MAC/Phy plus 3 ports linked at 1Gbps MAC/Phy plus 4 ports linked at 1Gbps MAC/Phy plus 5 ports linked at 1Gbps MAC/Phy plus 6 ports linked at 1Gbps MAC/Phy plus 7 ports linked at 1Gbps MAC/Phy plus 8 ports linked at 1Gbps MAC/Phy , up stacking, plus 8 ports linked at 1Gbps		3.05 3.22 3.4 3.58 3.78 3.95 4.15 4.3 4.5 4.6		W
	PCIe/104 Bus					
	Differential Output Voltage		0.8		1.2	V
	DC Differential TX Impedance		95.2		116.9	Ω
	Differential Input Voltage		0.175		3.3	V
	DC Differential RX Impedance		92.7		115.8	Ω
	Electrical Idle Detect Threshold		61		173	mV

3 Board Connection

3.1 Board Handling Precautions

To prevent damage due to Electrostatic Discharge (ESD), keep your board in its antistatic bag until you are ready to install it into your system. When removing it from the bag, hold the board at the edges, and do not touch the components or connectors. Handle the board in an antistatic environment, and use a grounded workbench for testing and handling of your hardware.

3.2 Physical Characteristics

STEP model is available upon request; contact RTD Tech Support for more information.

- LAN35x08HR-D Weight: Approximately 91 g (0.20 lbs.)
- LAN35x108HR-RJ Weight: Approximately 109 g (0.24 lbs.)
- Dimensions: 90.17 mm L x 95.89 mm W (3.550 in L x 3.775 in W)

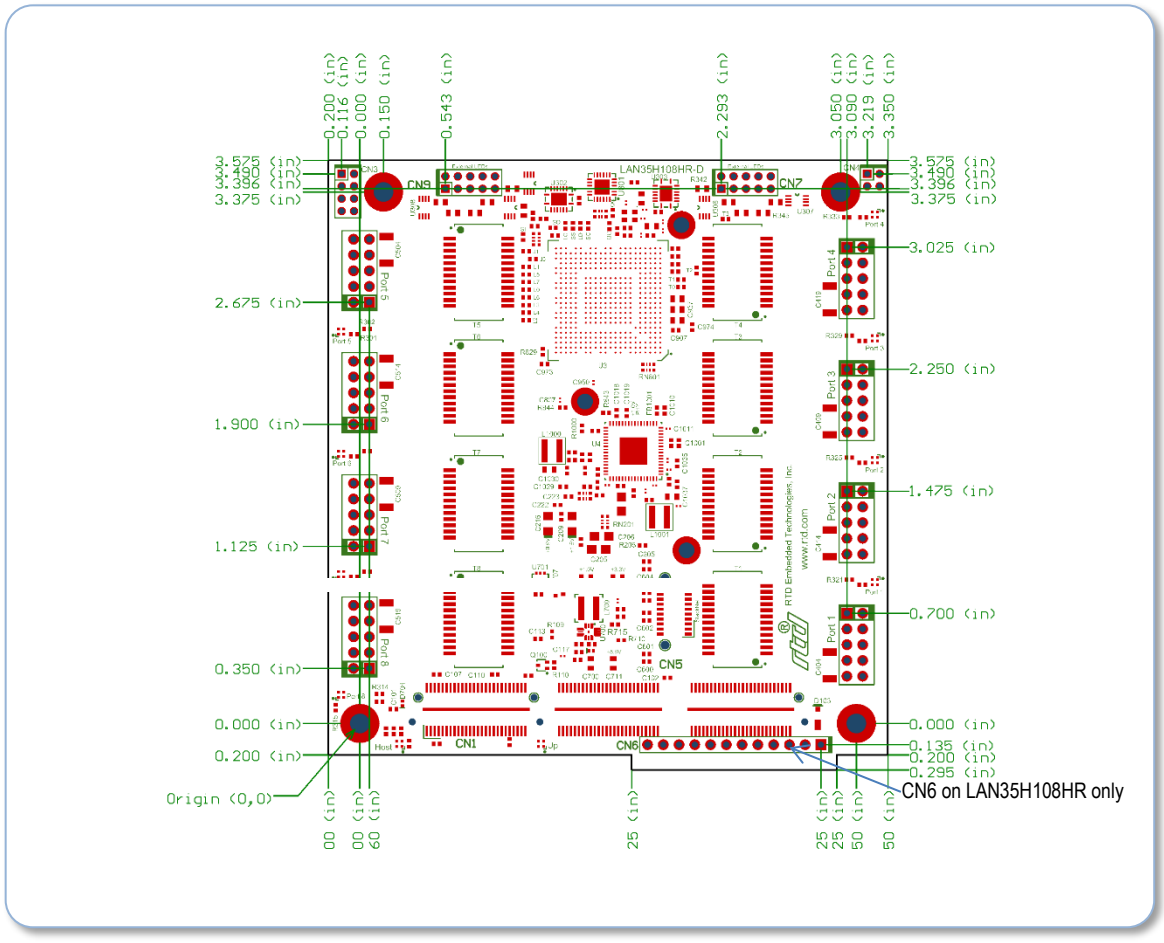

Figure 1: LAN35H108HR-D Board Dimensions

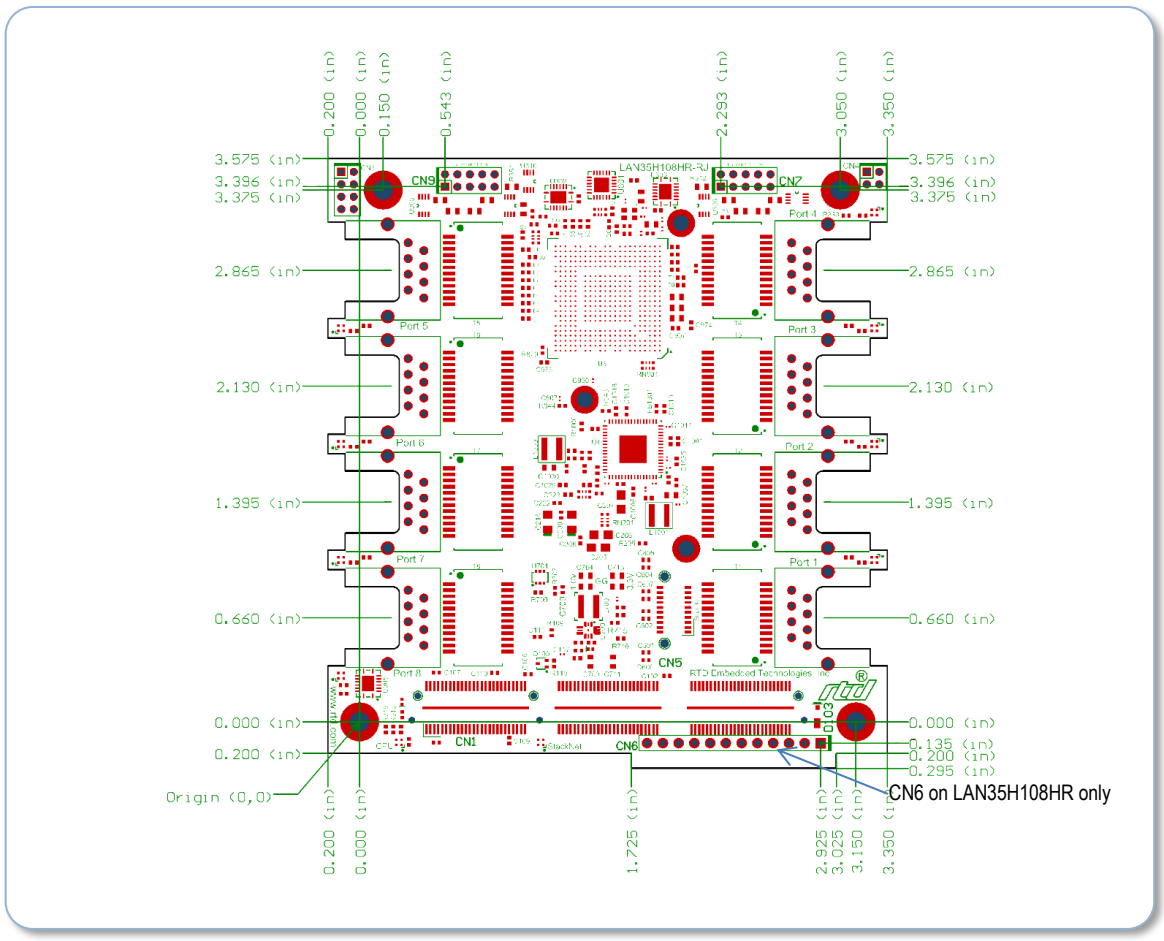

Figure 2: LAN35H108HR-RJ Board Dimensions

3.3 Connectors and Jumpers

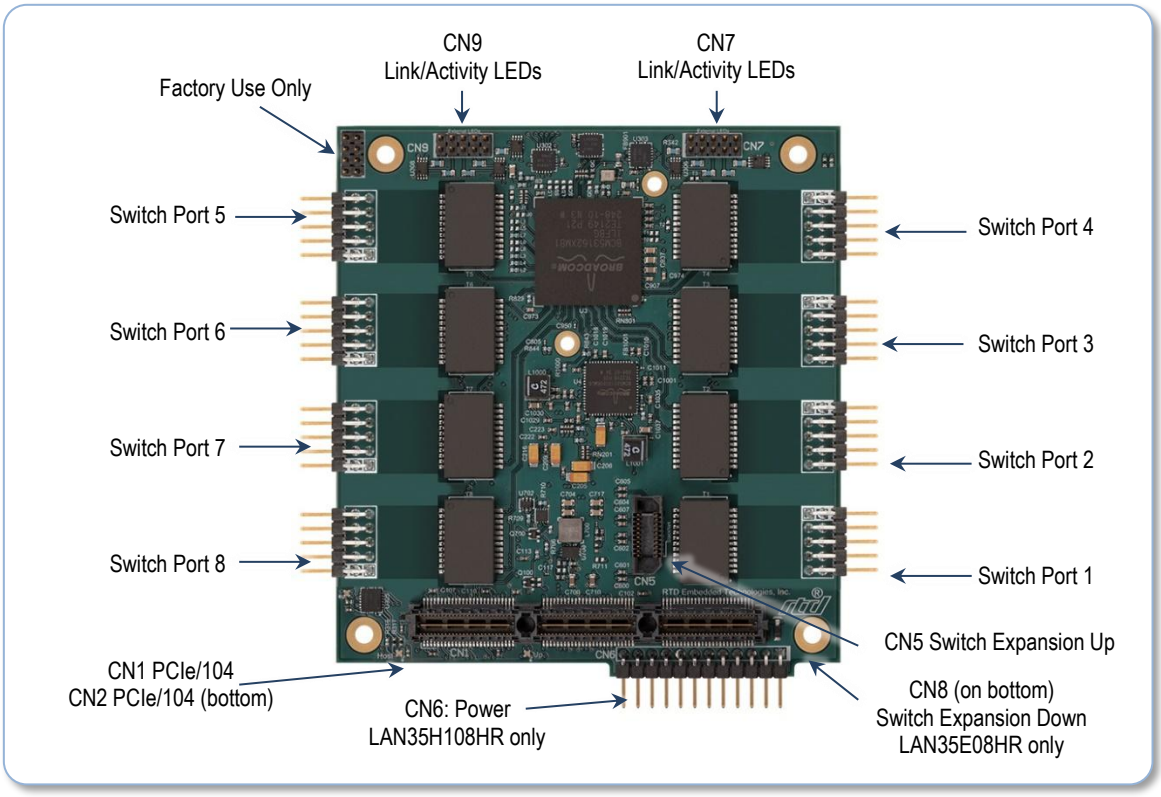

Figure 3: LAN35H108HR-D Board Connections

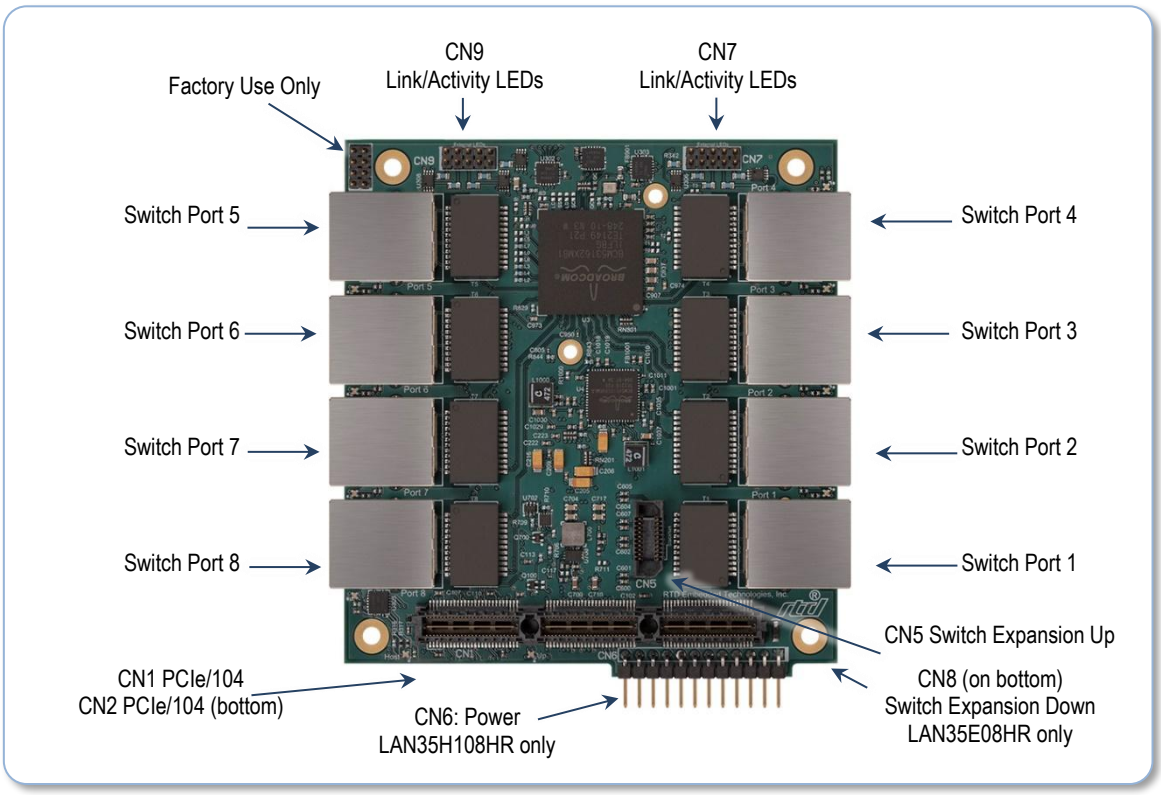

Figure 4: LAN35H108HR-RJ Board Connections

3.3.1 External I/O Connectors

- Port 1 – 8: 10-pin DIL connectors for Ethernet
- CN7/9: External LED connectors
- CN5: Switch Expansion Up Link
- CN6: Power Input

3.3.2 10-pin DIL Twisted Pair Ethernet, Port 1 – Port 8 (LANx108HR-D only)

Port 1 – Port 8 are the Ethernet I/O connectors. The pin out of all eight connector is the same and is listed in the table below.

Pin	1000 Function	10/100 Function	RJ-45 Pin
1	MDI_B+	Receive +	3
2	MDI_B-	Receive -	6
3	MDI_C+	Not Used	4
4	MDI_C-	Not Used	5
5	MDI_A+	Transmit +	1
6	MDI_A-	Transmit -	2
7	MDI_D+	Not Used	7
8	MDI_D-	Not Used	8
9	Shield Ground		
10	Shield Ground		

Table 4: Ethernet Signal Assignments

3.3.3 RJ45 Twisted Pair Ethernet, Port 1 – Port 8 (LANx08HR-RJ only)

Port 1 – Port 8 are UTP (Unshielded Twisted Pair) wiring normally used for 10/100/1000 Base-T Ethernet. The following table gives the pin out of Port 1 – Port 8.

Pin	1000 Function	10/100 Function
1	MDI_A+	Transmit +
2	MDI_A-	Transmit -
3	MDI_B+	Receive +
4	MDI_C+	Not Used
5	MDI_C-	Not Used
6	MDI_B-	Receive -
7	MDI_D+	Not Used
8	MDI_D-	Not Used

Table 5: RJ45 Signal Assignments

Port 1 – Port 8 are standard female RJ-45 connectors. The figure below shows the pin numbering when **looking into the connector**:

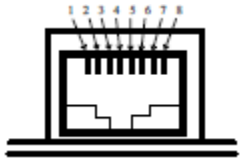

Figure 5: RJ-45 Jack Connector

3.3.4 12-PIN SIL POWER, CN6 (LAN35H108HR ONLY)

CN6 is a power connector to allow use in a standalone system. The board only requires +5V and ground, however if +12V is supplied it will power the PCIe/104 bus connectors. CN6 is only on the LAN35H108HR versions. The pin out is listed in the table below.

Pin	Function
1	Ground
2	+5V
3	+5V
4	Ground
5	Ground
6	+12V
7	+12V
8	Ground
9	Ground
10	+5V
11	+5V
12	Ground

Table 6: Power Signal Assignments

3.3.5 STATUS LEDS

The tri-color LEDs on the board are used to indicate the status of the Ethernet ports.

LED Color	Description
Off	No Link
Green	Link at 1000 Mbps, flash with activity
Blue	Link at 100 Mbps, flash with activity
Red	Link at 10 Mbps, flash with activity

Table 7: Status LEDs

3.3.6 EXTERNAL STATUS LED CONNECTORS CN7 AND CN9

CN7 and CN9 are the status LED signals that are buffered and able to sink 24 mA. Each signal is driven low when active and tri-stated when inactive, has a 374 Ohm current limiting resistor, and supports being pulled up to +3.3 volts. The drive circuit is shown below:

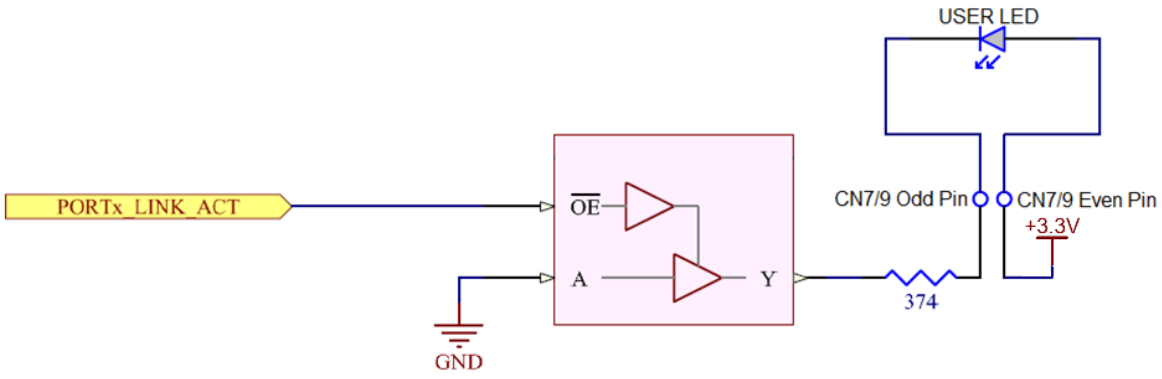

Figure 6: External LED Drive Circuit

The pin out is in the tables below.

CN7 Pin	Function	Description
1	Port 1 Link/activity	Low when linked, goes tri-state with activity
3	Port 2 Link/activity	Low when linked, goes tri-state with activity
5	Port 3 Link/activity	Low when linked, goes tri-state with activity
7	Port 4 Link/activity	Low when linked, goes tri-state with activity
9	LAN35H108HR – Host Ethernet Link	Low when linked, goes tri-state with activity
2, 4, 6, 8, 10	+3.3V volts	Power for LEDs

Table 8: CN7 External LED Drive

CN9 Pin	Function	Description
1	Port 5 Link/activity	Low when linked, goes tri-state with activity
3	Port 6 Link/activity	Low when linked, goes tri-state with activity
5	Port 7 Link/activity	Low when linked, goes tri-state with activity
7	Port 8 Link/activity	Low when linked, goes tri-state with activity
9	Expansion Port Up Link/activity	Low when linked, goes tri-state with activity
2, 4, 6, 8, 10	+3.3V volts	Power for LEDs

Table 9: CN8 External LED Drive

3.3.7 CN1 (TOP) & CN2 (BOTTOM) BUS CONNECTORS

The PCIe connector is the connection to the system CPU. The position and pin assignments are compliant with the *PCI/104-Express Specification*. (See PC/104 Specifications on page 27)

The LAN35H108HR is an “Universal” board and can connect to either a Type 1 or Type 2 PCIe/104 connector.

3.4 Board LEDs

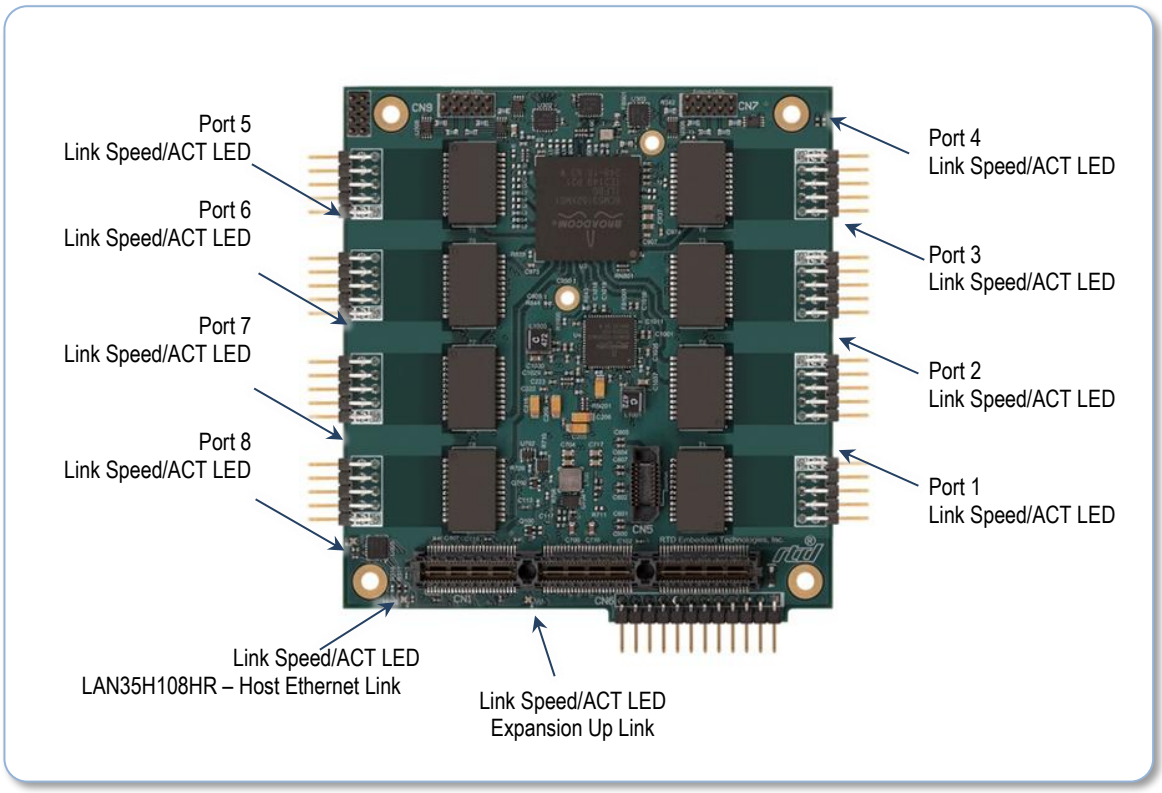

Figure 7: LAN35H108HR-D Board LEDs

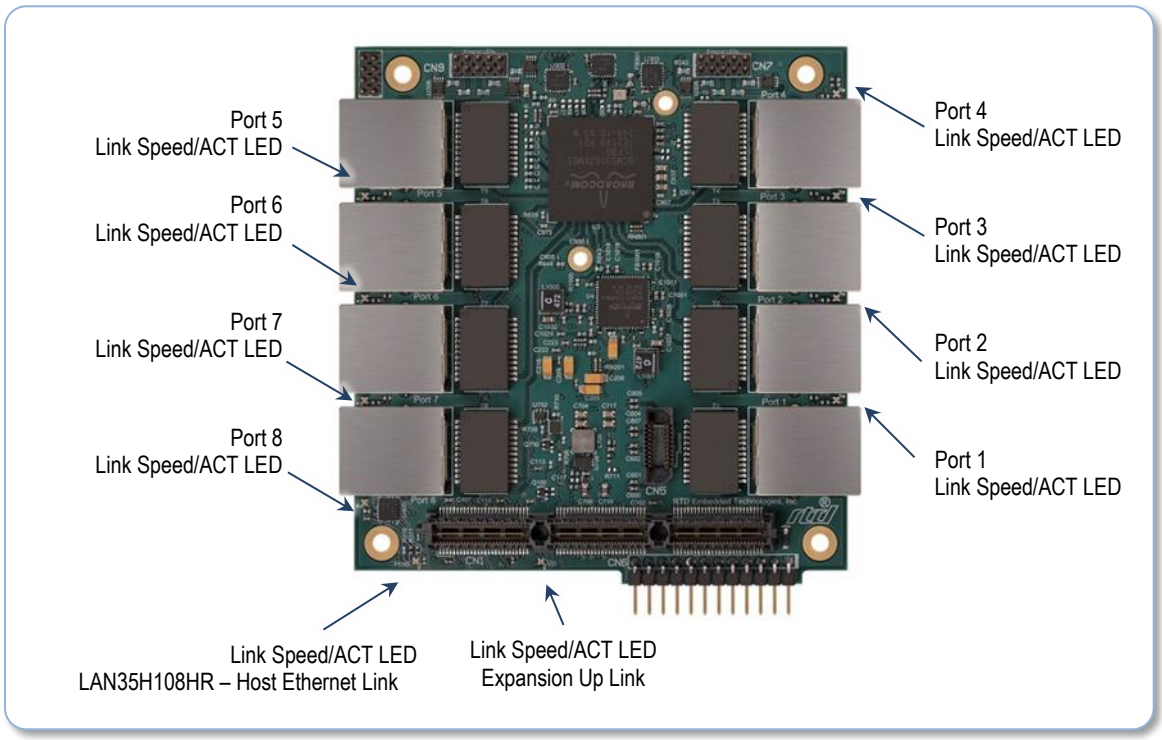

Figure 8: LAN35H108HR-RJ Board LEDs

3.5 Steps for Installing

1. Always work at an ESD protected workstation and wear a grounded wrist-strap.
2. Turn off power to the PC/104 system or stack.
3. Select and install stand-offs to properly position the module on the stack.
4. Remove the module from its anti-static bag.
5. Check that pins of the bus connector are properly positioned.
6. Check the stacking order; make sure all of the busses used by the peripheral cards are connected to the cpuModule.
7. Hold the module by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
8. Gently and evenly press the module onto the PC/104 stack.
9. If any boards are to be stacked above this module, install them.
10. Attach any necessary cables to the PC/104 stack.
11. Re-connect the power cord and apply power to the stack.
12. Boot the system and verify that all of the hardware is working properly.

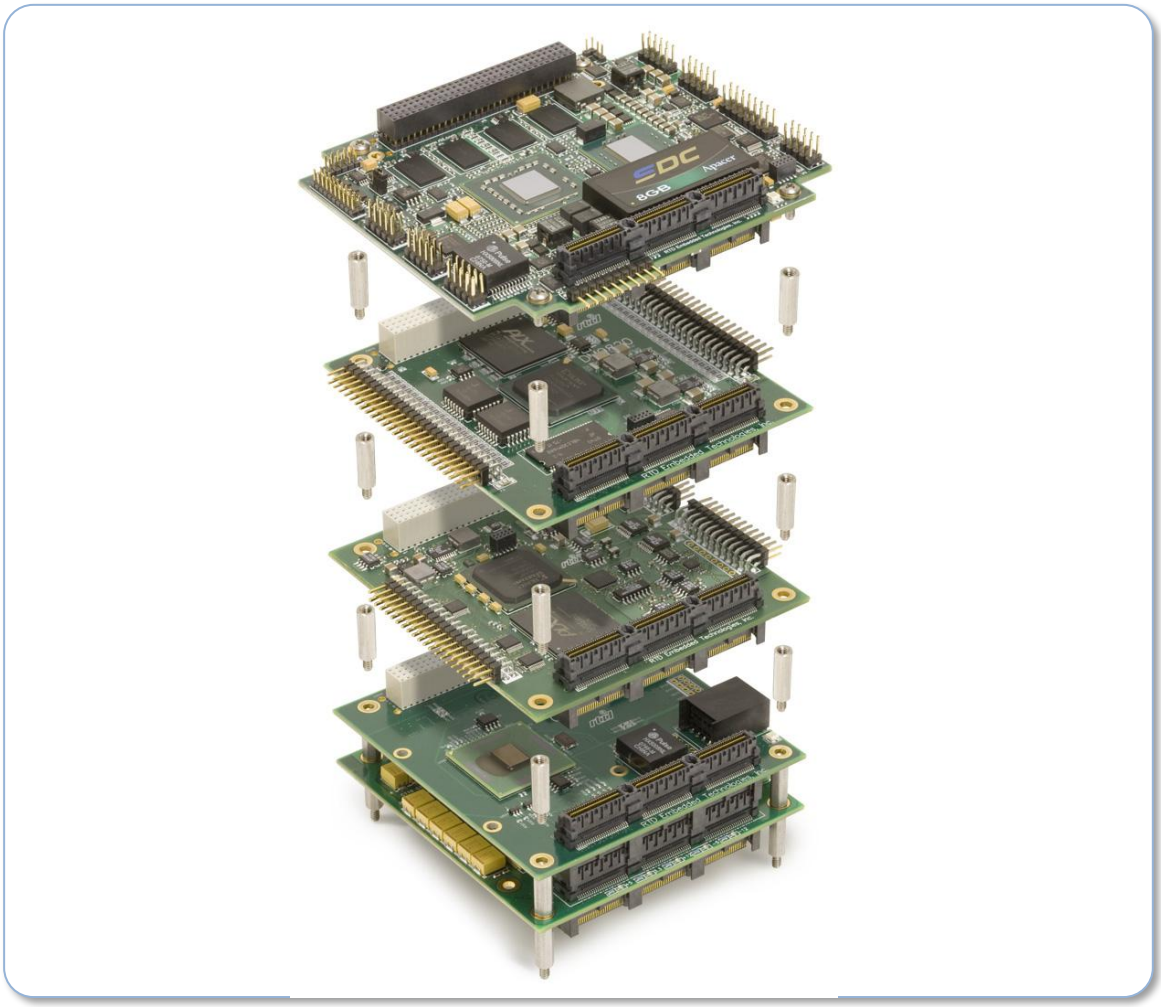

Figure 9: Example 104™ Stack

4 Heatsink

The heatsink supplied with the LAN35H108HR & LAN35H08HR is designed to draws heat away from the ethernet switch, this is required for proper operation at 85°C. All other components rely on the ambient air temperature being maintained at or below the maximum specified 85°C.

4.1 Heatsink Dimensions

- Weight: Approximately 0.07 lbs. (0.03 Kg)

- Dimensions:
  - Length: 3.25 inches (82.6 mm)
  - Width: 2.08 inches (52.7 mm)
  - Height: 0.35 inches (8.8 mm)

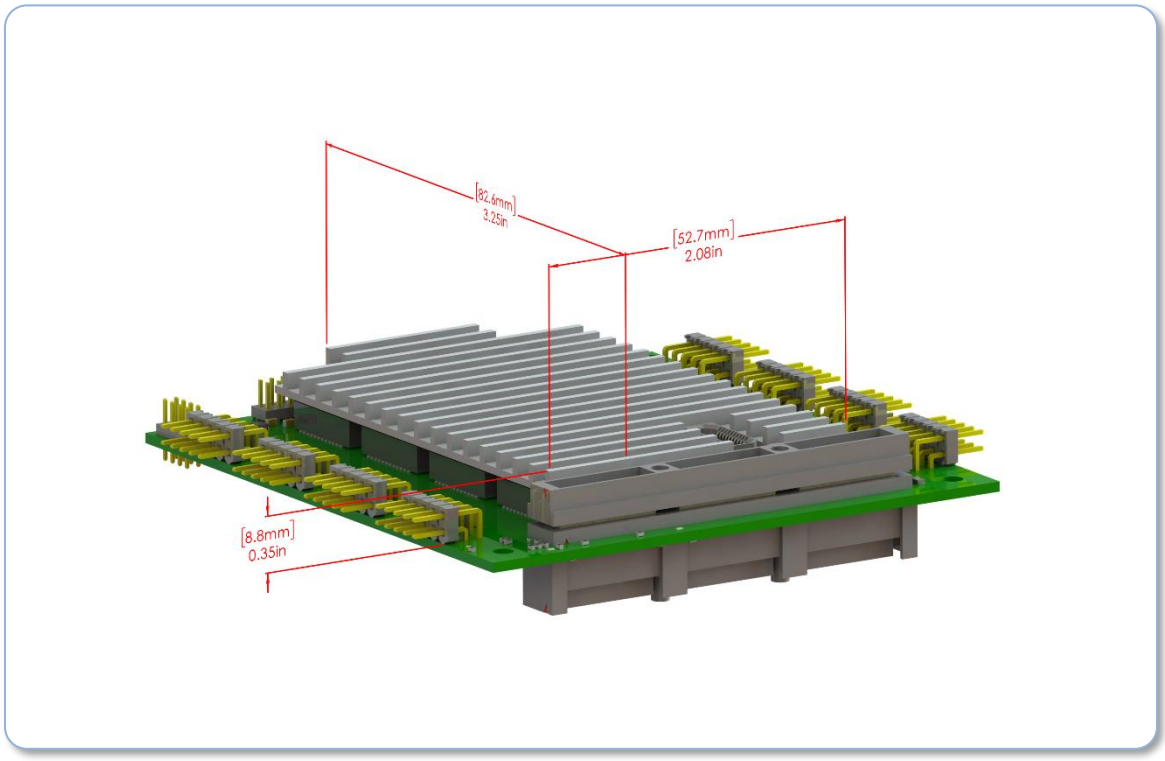

Figure 10: Heatsink Dimensions

5 IDAN® Connections

5.1 Module Handling Precautions

To prevent damage due to Electrostatic Discharge (ESD), keep your module in its antistatic bag until you are ready to install it into your system. When removing it from the bag, hold the module by the aluminum enclosure, and do not touch the components or connectors. Handle the module in an antistatic environment, and use a grounded workbench for testing and handling of your hardware.

5.2 Physical Characteristics

- Weight: Approximately 0.46 lbs. (0.21 Kg)

- Dimensions:
  - Length: 5.983 inches (151.972 mm)
  - Width: 5.117 inches (129.978 mm)
  - Height: 0.669 inches (16.993 mm)

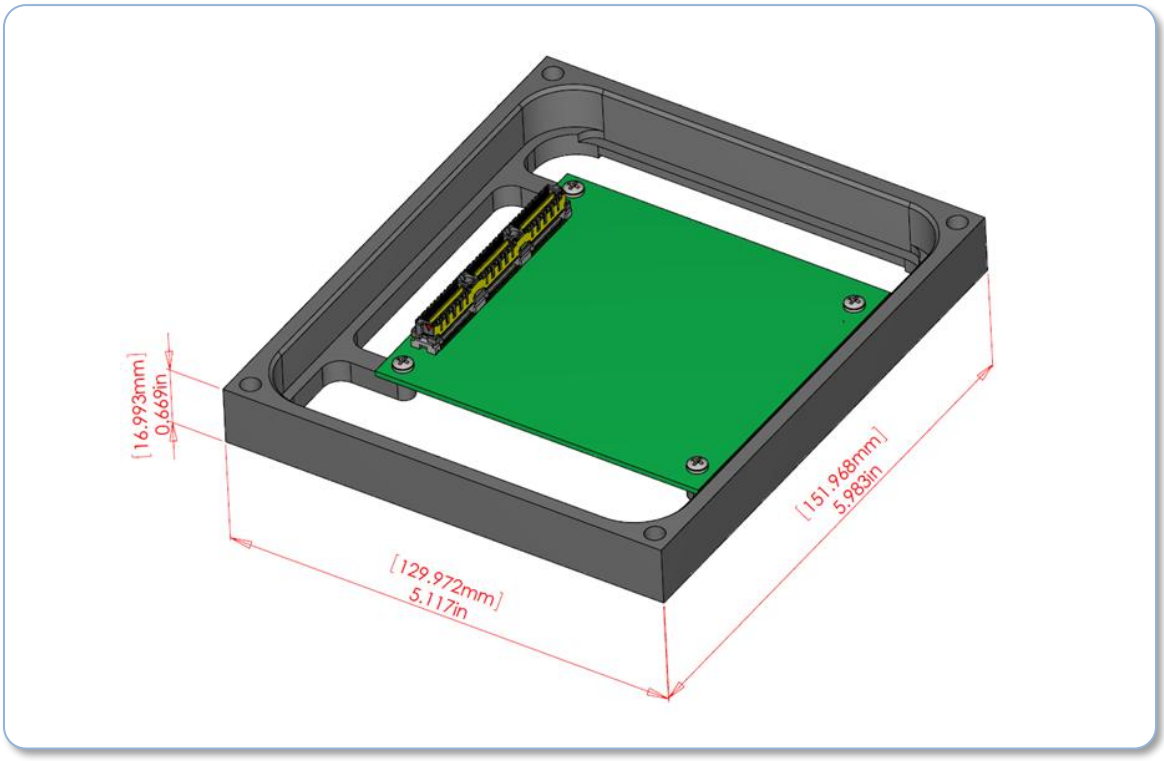

Figure 11: IDAN® Dimensions

5.3 IDAN® Versions

The Ethernet switch module is available in an IDAN version. The IDAN-LAN35H108HR feature rugged 37-pin “D” connectors.

5.3.1 IDAN-LAN35H108HR

These utilityModules are an IDAN configuration with two 37-pin “D” connectors with four Ethernet ports in each. IDAN-XKCM48 is an optional cable kit that breaks the two 37-pin “D” connectors into eight Ethernet ports into RJ-45 connectors. It has two cables with 37-pin “D” connectors on one end and four 9-pin “D” on the other end and eight 9-pin “D” to RJ45 adapters.

Figure 12: IDAN-LAN35H108HR Front View

IDAN	Signal		LAN35H108HR		IDAN-XKCM33 Cable Kit
Pin	1000 Function	10/100 Function	Port	Pin	9 Pin "D" Connector (Male)
1	MDI_B+	Receive +	4	1	PORT 4-1
20	MDI_B-	Receive -		2	PORT 4-6
2	MDI_C+	Not Used		3	PORT 4-2
21	MDI_C-	Not Used		4	PORT 4-7
3	MDI_A+	Transmit +		5	PORT 4-3
22	MDI_A-	Transmit -		6	PORT 4-8
4	MDI_D+	Not Used		7	PORT 4-4
23	MDI_D-	Not Used		8	PORT 4-9
5	Shield Ground	Shield Ground		9	PORT 4-5
N/C	N/C	N/C		10	N/C
24	MDI_B+	Receive +	3	1	PORT 3-1
6	MDI_B-	Receive -		2	PORT 3-6
25	MDI_C+	Not Used		3	PORT 3-2
7	MDI_C-	Not Used		4	PORT 3-7
26	MDI_A+	Transmit +		5	PORT 3-3
8	MDI_A-	Transmit -		6	PORT 3-8
27	MDI_D+	Not Used		7	PORT 3-4
9	MDI_D-	Not Used		8	PORT 3-9
28	Shield Ground	Shield Ground		9	PORT 3-5
N/C	N/C	N/C		10	N/C
10	MDI_B+	Receive +	2	1	PORT 2-1
29	MDI_B-	Receive -		2	PORT 2-6
11	MDI_C+	Not Used		3	PORT 2-2
30	MDI_C-	Not Used		4	PORT 2-7
12	MDI_A+	Transmit +		5	PORT 2-3
31	MDI_A-	Transmit -		6	PORT 2-8
13	MDI_D+	Not Used		7	PORT 2-4
32	MDI_D-	Not Used		8	PORT 2-9
14	Shield Ground	Shield Ground		9	PORT 2-5
N/C	N/C	N/C		10	N/C
33	MDI_B+	Receive +	1	1	PORT 1-1
15	MDI_B-	Receive -		2	PORT 1-6
34	MDI_C+	Not Used		3	PORT 1-2
16	MDI_C-	Not Used		4	PORT 1-7
35	MDI_A+	Transmit +		5	PORT 1-3
17	MDI_A-	Transmit -		6	PORT 1-8
36	MDI_D+	Not Used		7	PORT 1-4
18	MDI_D-	Not Used		8	PORT 1-9
37	Shield Ground	Shield Ground		9	PORT 1-5
19	N/C	N/C		10	N/C

Table 10: IDAN-LAN35H108HR Front Connector Pin Out

Figure 13: IDAN-LAN35H108HR Rear View

IDAN	Signal		LAN35H108HR		IDAN-XKCM33 Cable Kit
Pin	1000 Function	10/100 Function	Port	Pin	9 Pin "D" Connector (Male)
1	MDI_B+	Receive +	8	1	PORT 8-1
20	MDI_B-	Receive -		2	PORT 8-6
2	MDI_C+	Not Used		3	PORT 8-2
21	MDI_C-	Not Used		4	PORT 8-7
3	MDI_A+	Transmit +		5	PORT 8-3
22	MDI_A-	Transmit -		6	PORT 8-8
4	MDI_D+	Not Used		7	PORT 8-4
23	MDI_D-	Not Used		8	PORT 8-9
5	Shield Ground	Shield Ground		9	PORT 8-5
N/C	N/C	N/C		10	N/C
24	MDI_B+	Receive +	7	1	PORT 7-1
6	MDI_B-	Receive -		2	PORT 7-6
25	MDI_C+	Not Used		3	PORT 7-2
7	MDI_C-	Not Used		4	PORT 7-7
26	MDI_A+	Transmit +		5	PORT 7-3
8	MDI_A-	Transmit -		6	PORT 7-8
27	MDI_D+	Not Used		7	PORT 7-4
9	MDI_D-	Not Used		8	PORT 7-9
28	Shield Ground	Shield Ground		9	PORT 7-5
N/C	N/C	N/C		10	N/C
10	MDI_B+	Receive +	6	1	PORT 6-1
29	MDI_B-	Receive -		2	PORT 6-6
11	MDI_C+	Not Used		3	PORT 6-2
30	MDI_C-	Not Used		4	PORT 6-7
12	MDI_A+	Transmit +		5	PORT 6-3
31	MDI_A-	Transmit -		6	PORT 6-8
13	MDI_D+	Not Used		7	PORT 6-4
32	MDI_D-	Not Used		8	PORT 6-9
14	Shield Ground	Shield Ground		9	PORT 6-5
N/C	N/C	N/C		10	N/C
33	MDI_B+	Receive +	5	1	PORT 5-1
15	MDI_B-	Receive -		2	PORT 5-6
34	MDI_C+	Not Used		3	PORT 5-2
16	MDI_C-	Not Used		4	PORT 5-7
35	MDI_A+	Transmit +		5	PORT 5-3
17	MDI_A-	Transmit -		6	PORT 5-8
36	MDI_D+	Not Used		7	PORT 5-4
18	MDI_D-	Not Used		8	PORT 5-9
37	Shield Ground	Shield Ground		9	PORT 5-5
19	N/C	N/C		10	N/C

Table 11: IDAN-LAN35H108HR Rear Connector Pin Out

5.4 Steps for Installing

1. Always work at an ESD protected workstation, and wear a grounded wrist-strap.
2. Turn off power to the IDAN system.
3. Remove the module from its anti-static bag.
4. Check that pins of the bus connector are properly positioned.
5. Check the stacking order; make sure all of the busses used by the peripheral cards are connected to the cpuModule.
6. Hold the module by its edges and orient it so the bus connector pins line up with the matching connector on the stack.
7. Gently and evenly press the module onto the IDAN system.
8. If any boards are to be stacked above this module, install them.
9. Finish assembling the IDAN stack by installing screws of an appropriate length.
10. Attach any necessary cables to the IDAN system.
11. Re-connect the power cord and apply power to the stack.
12. Boot the system and verify that all of the hardware is working properly.

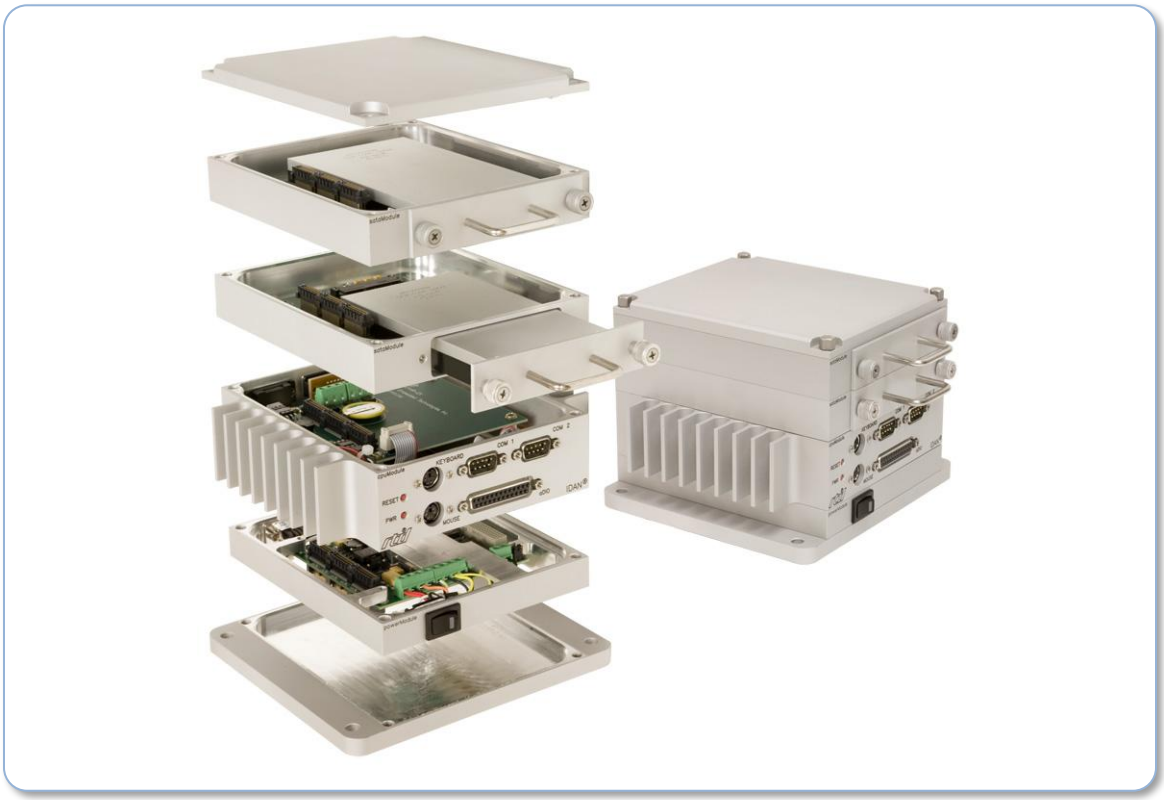

Figure 14: Example IDAN® System

6 Functional Description

6.1 Block Diagrams

The Figures below shows the functional block diagram of the LAN35H108HR and IDAN-LAN35H108HR. The various parts of the block diagram are discussed in the following sections.

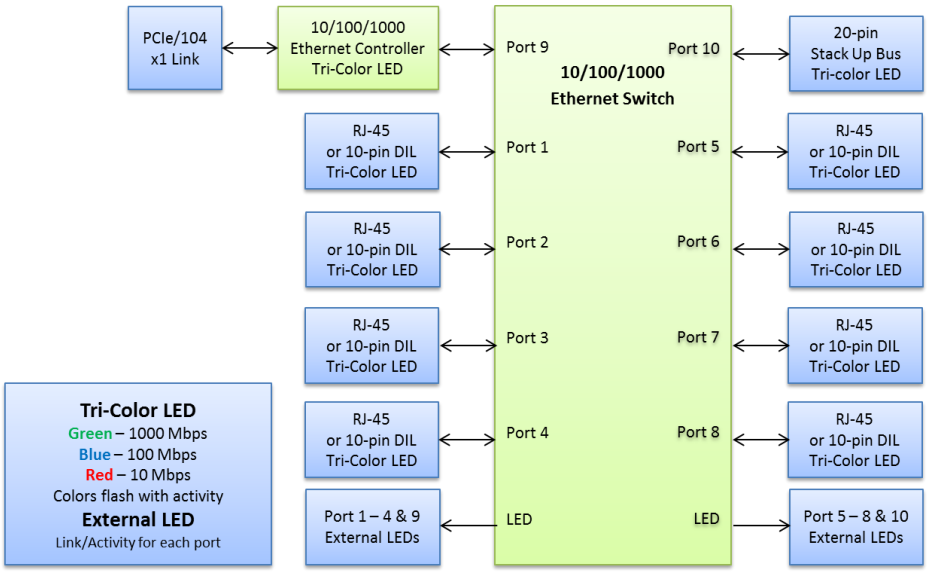

Figure 15: LAN35H108HR Block Diagram

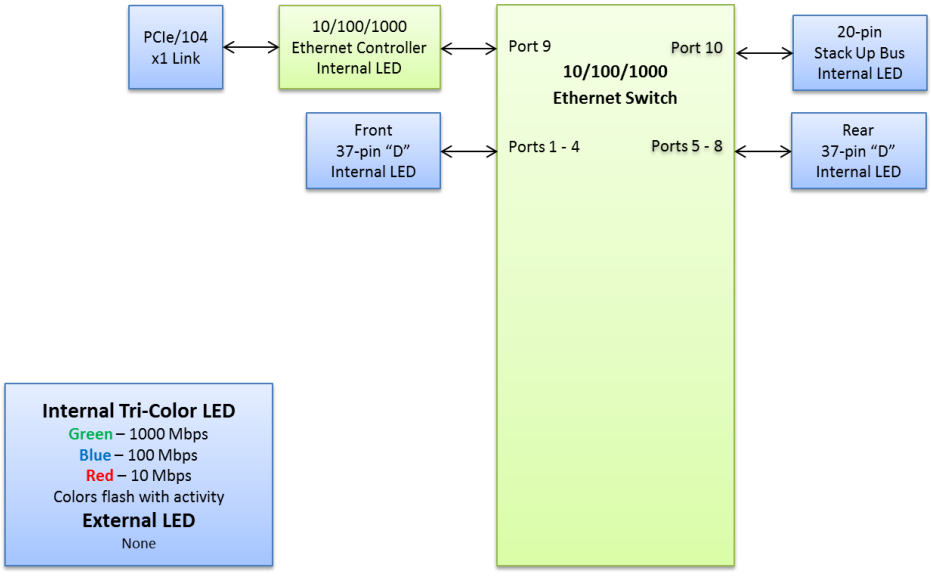

Figure 16: IDAN-LAN35H108HR Block Diagram

The Figures below shows the functional block diagram of the LAN35E08HR and IDAN-LAN35E08HR. The various parts of the block diagram are discussed in the following sections.

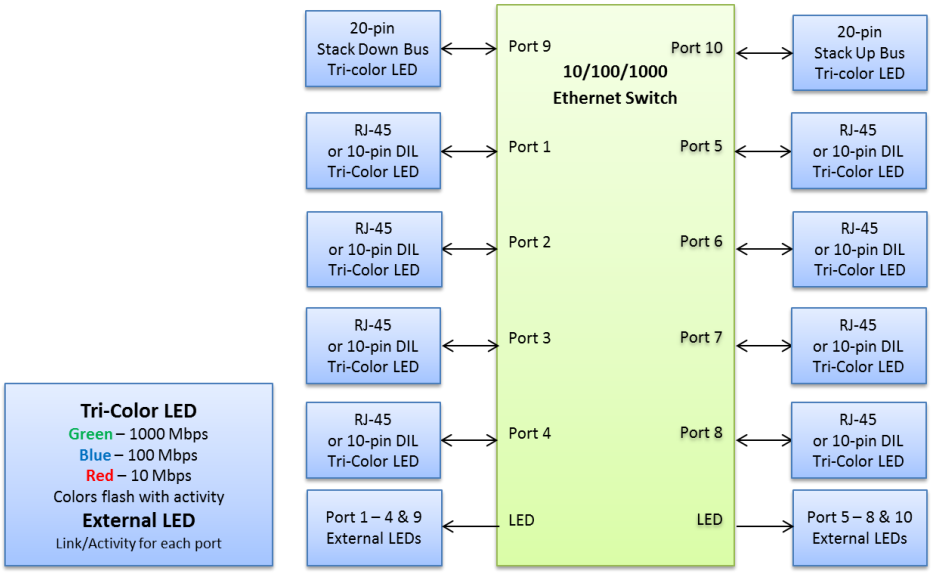

Figure 17: LAN35E08HR Block Diagram

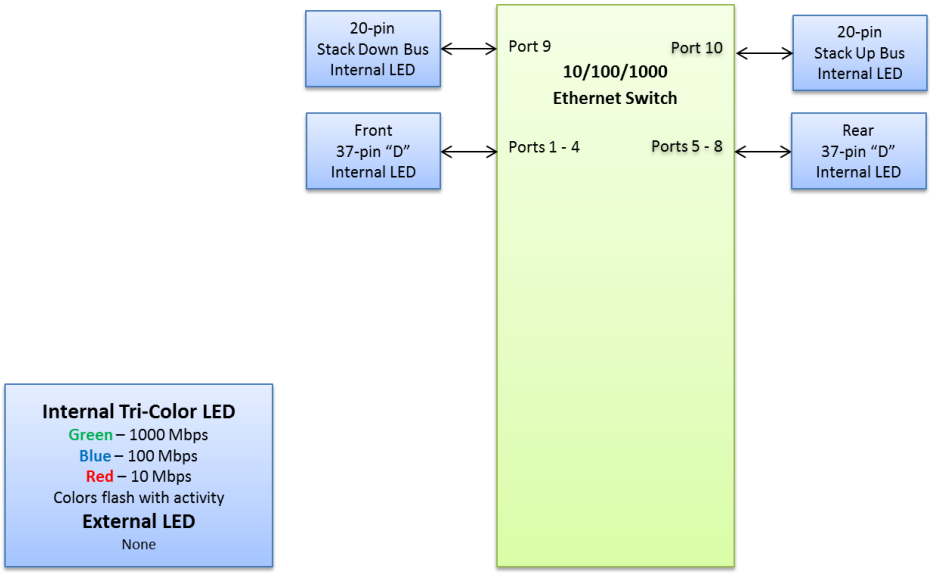

Figure 18: IDAN-LAN35E08HR Block Diagram

6.2 Broadcom Gig-Ethernet Switch

The main components of the LAN35H108HR & LAN35E08HR is a Broadcom BCM53162X Gigabit Ethernet switch. This switch contains 10 full-duplex 10/100/1000 BASE-TX Ethernet transceivers for network interfacing. One of these ports is used in conjunction with the Intel I210 for a host port. This allows the LAN35H108HR to work as its own mini-server in a stacked system. In a stand-alone system the Broadcom switch acts as a basic Ethernet switch. Any port can be used as an upstream port to supply a connection to the other ports.

6.3 Jumbo Frame Support

The Broadcom Ethernet switch is capable of forwarding Ethernet frames up to 9720 bytes. The maximum frame size supported by the Intel Ethernet controller is 9014 bytes. To use Jumbo frames, it must be enabled in the Ethernet

Controller driver settings (e.g. via the Device Manager in Windows). Until this is enabled, the Intel controller will drop any Jumbo frames it receives. Note that to use Jumbo frames effectively, all devices connected to the network must have Jumbo frames enabled, AND must agree on the frame size (mismatched frame sizes will result in dropped packets).

6.4 Intel WGI210IS Gigabit Ethernet Controller

The LAN35H108HR has an onboard Gigabit Ethernet controller, the Intel WGI210IS. The Intel WGI210IS is an industrial rated Gigabit Ethernet controller which features Auto-Crossover for MDI/MDI-X, 9014 bytes Jumbo Frame support, 40KB packet buffer size and IPv4/6 support. This controller connects to the host CPU through a x1 PCI Express link on the PCIe/104 connector and interfaces through the fifth port of the Ethernet switch to provide a host port for stacked systems.

6.5 Onboard LEDs and External LED Connectors

The LAN35H108HR has onboard tri-color LEDs for each of the ten Ethernet ports on the board. The setting for the onboard LEDs is to show link, activity, and speed at 10/100/1000M. There are two 0.1 inch DIL connectors (CN7 & CN8) that can be wired to external LED circuitry. They carry a link/activity signal for each port.

7 Troubleshooting

If you are having problems with your system, please try the following initial steps:

- **Simplify the System** – Remove modules one at a time from your system to see if there is a specific module that is causing a problem. Perform you troubleshooting with the least number of modules in the system possible.

- **Swap Components** – Try replacing parts in the system one at a time with similar parts to determine if a part is faulty or if a type of part is configured incorrectly.

If problems persist, or you have questions about configuring this product, contact RTD Embedded Technologies via the following methods:

Phone: +1-814-234-8087
E-Mail: techsupport@rtd.com

Be sure to check the RTD web site (http://www.rtd.com) frequently for product updates, including newer versions of the board manual and application software.

8 Additional Information

8.1 PC/104 Specifications

A copy of the latest PC/104 specifications can be found on the webpage for the PC/104 Embedded Consortium:

www.pc104.org

8.2 PCI and PCI Express Specification

A copy of the latest PCI and PCI Express specifications can be found on the webpage for the PCI Special Interest Group:

www.pcisig.com

9 Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD Embedded Technologies, Inc. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, RTD Embedded Technologies will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD Embedded Technologies. All replaced parts and products become the property of RTD Embedded Technologies. Before returning any product for repair, customers are required to contact the factory for a Return Material Authorization (RMA) number.

This limited warranty does not extend to any products which have been damaged as a result of accident, misuse, abuse (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD Embedded Technologies, “acts of God” or other contingencies beyond the control of RTD Embedded Technologies), or as a result of service or modification by anyone other than RTD Embedded Technologies. Except as expressly set forth above, no other warranties are expressed or implied, including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose, and RTD Embedded Technologies expressly disclaims all warranties not stated herein. All implied warranties, including implied warranties for merchantability and fitness for a particular purpose, are limited to the duration of this warranty. In the event the product is not free from defects as warranted above, the purchaser's sole remedy shall be repair or replacement as provided above. Under no circumstances will RTD Embedded Technologies be liable to the purchaser or any user for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of the use or inability to use the product.

Some states do not allow the exclusion or limitation of incidental or consequential damages for consumer products, and some states do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RTD Embedded Technologies, Inc.
103 Innovation Boulevard
State College, PA 16803 USA
Telephone: 814-234-8087
Fax: 814-234-5218

www.rtd.com

sales@rtd.com
techsupport@rtd.com

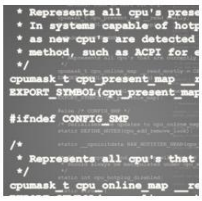

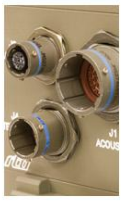
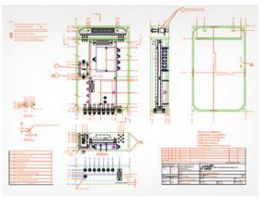

PC/104

DESIGNED AND MADE IN THE UNITED STATES™

AS9100 - ISO 9001 CERTIFIED

Copyright 2026 by RTD Embedded Technologies, Inc. All rights reserved.