


Fastrax iTrax02 DOS Application

User's Manual Version 1.0.x

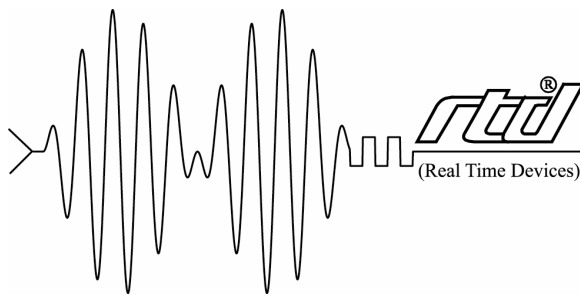

RTD Embedded Technologies, Inc.

"Accessing the Analog World"®

SWM-640020015

Rev. A



RTD Embedded Technologies, INC.

103 Innovation Blvd.
State College, PA 16803-0906

Phone: +1-814-234-8087

FAX: +1-814-234-5218

E-mail

sales@rtd.com

techsupport@rtd.com

web site

<http://www.rtd.com>

Revision History

01/31/2005 Revision A issued
 Documented for ISO9000

Fastrax iTrax02 Application User's Manual
Published by:

RTD Embedded Technologies, Inc.
103 Innovation Blvd.
State College, PA 16803-0906

Copyright 2004 by RTD Embedded Technologies, Inc.
All rights reserved
Printed in U.S.A.

The RTD Logo is a registered trademark of RTD Embedded Technologies. cpuModule and utilityModule are trademarks of RTD Embedded Technologies. PS/2, PC/XT, PC/AT and IBM are trademarks of International Business Machines Inc. MS-DOS, Windows, Windows 98, Windows NT, Windows 2000 and Windows XP are trademarks of Microsoft Corp. PC/104 is a registered trademark of PC/104 Consortium. All other trademarks appearing in this document are the property of their respective owners.

Table of Contents

TABLE OF CONTENTS	4
INTRODUCTION	5
DOS INSTALLATION	6
INSTALLATION OF THE BOARD AND SOFTWARE	6
STARTING THE SOFTWARE	6
USING THE SOFTWARE	6
LIMITED WARRANTY.....	8

Introduction

This manual describes the operation of the Fastrax iTrax02 DOS monitoring application. The program performs the following functions:

- Monitoring the current coordinates: Latitude, Longitude, altitude, speed and course over ground.
- Monitoring and configuring the device interface parameters such as the protocol and serial COM speed.

Fully commented source code for the application is also included. The program can be built using OpenWatcom Version 1.3

Note there are several RTD boards that use the iTrax02 module. Currently this includes the GPS6160, the COM17045, the COM17035 and the COM27190. This software works with all the boards.

DOS Installation

Installation of the Board and Software

Before installing the application and source files, you need to install the board in your PC. The jumper locations and meanings can be found in the hardware manual. After the hardware is installed you can unzip the software to a new directory. The GPSTMon application will be installed in the main directory. Below the main directory is a Source directory which contains all the source for the GPSTMon application. The source can be compiled using OpenWatcom 1.3. Note the readme file in the GPSTMon project, it contains important information about building and running the GPSTMon application.

Starting the Software

To Start the software, navigate to the \exe directory, type in GPSTMON followed by the base address you configured the board to. E.G:

```
gpsmon 298
```

Using the Software

GPSTMon Application

On the main screen you may change the baud rate, change the protocol or switch to the satellite list.

To change the baud rate you must be in the ZNMEA protocol. Simply pressing B will cycle through the allowed baud rates.

To change the protocol, press the P key. There are two protocols the board supports, iTalk and ZNMEA.

To see the list of satellites the board is currently using press the S key. Pressing the S key again will return you to the main screen.

The following information is displayed on the main dialog:

GPS Status – Indicates the status of the calculated position. If the value is ‘Valid’, then the position is valid. Otherwise the position is invalid.

Fix – Fix mode can be 2D or 3D or Invalid

Quality – Can be Invalid, GPS-Fix or DGPS Fix

Date and Time – Date and Time of the GPS receiver. The receiver gets the GMT date and time from the satellites

Num of Navigation Satellites – Number of satellites that are currently being used for navigation. When this number is less than three, the position is invalid.

Num of Visible Satellites – This is the number of satellites the receiver can ‘see’.

Position Dilution of Precision – A measure of how much the error in the position estimate produced from satellite range measurement is amplified by poor arrangement of satellites with respect to the receiver antenna.

Horizontal Dilution of Precision – A measure of how much the satellite geometry affects the position estimate

Vertical Dilution of Precision -- A measure of how much the satellite geometry affects the position estimate

Latitude – Position in Degrees, Minutes and fractions of minutes

Longitude -- Position in Degrees, Minutes and fractions of minutes

AMSL Alt – Altitude above mean sea level in meters.

Geoid Alt – Height of geoid (mean sea level) above WGS84 ellipsoid.

Speed – Speed over ground in Knots

Crse over Gnd – Course over ground in Degrees and fractions of degrees

Magnetic Variation – Difference between Magnetic north and true north at the current location

On the Satellite screen the following columns appear:

Ch # -- Receiver's channel number (1-32)

PRN # -- Satellites Pseudo Random Noise number.

Elevation

Azimuth

SNR – Signal to Noise ratio

Readdio

This program displays the value of the digital input port. To start it, type the program name followed by the base address of the board. E.G: readdio 298

Writedio

This program outputs a value on the digital output port. . To start it, type the program name followed by the base address of the board. E.G: writedio 298

Limited Warranty

RTD Embedded Technologies, Inc. warrants the hardware and software products it manufactures and produces to be free from defects in materials and workmanship for one year following the date of shipment from RTD Embedded Technologies, INC. This warranty is limited to the original purchaser of product and is not transferable.

During the one year warranty period, RTD Embedded Technologies will repair or replace, at its option, any defective products or parts at no additional charge, provided that the product is returned, shipping prepaid, to RTD Embedded Technologies. All replaced parts and products become the property of RTD Embedded Technologies. Before returning any product for repair, customers are required to contact the factory for an RMA number.

THIS LIMITED WARRANTY DOES NOT EXTEND TO ANY PRODUCTS WHICH HAVE BEEN DAMAGED AS A RESULT OF ACCIDENT, MISUSE, ABUSE (such as: use of incorrect input voltages, improper or insufficient ventilation, failure to follow the operating instructions that are provided by RTD Embedded Technologies, "acts of God" or other contingencies beyond the control of RTD Embedded Technologies), OR AS A RESULT OF SERVICE OR MODIFICATION BY ANYONE OTHER THAN RTD Embedded Technologies. EXCEPT AS EXPRESSLY SET FORTH ABOVE, NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND RTD Embedded Technologies EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED HEREIN. ALL IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES FOR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WARRANTY. IN THE EVENT THE PRODUCT IS NOT FREE FROM DEFECTS AS WARRANTED ABOVE, THE PURCHASER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. UNDER NO CIRCUMSTANCES WILL RTD Embedded Technologies BE LIABLE TO THE PURCHASER OR ANY USER FOR ANY DAMAGES, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOST PROFITS, LOST SAVINGS, OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, AND SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

RTD Embedded Technologies, Inc.
103 Innovation Blvd.
State College PA 16803-0906
USA
Our website: www.rtd.com